 
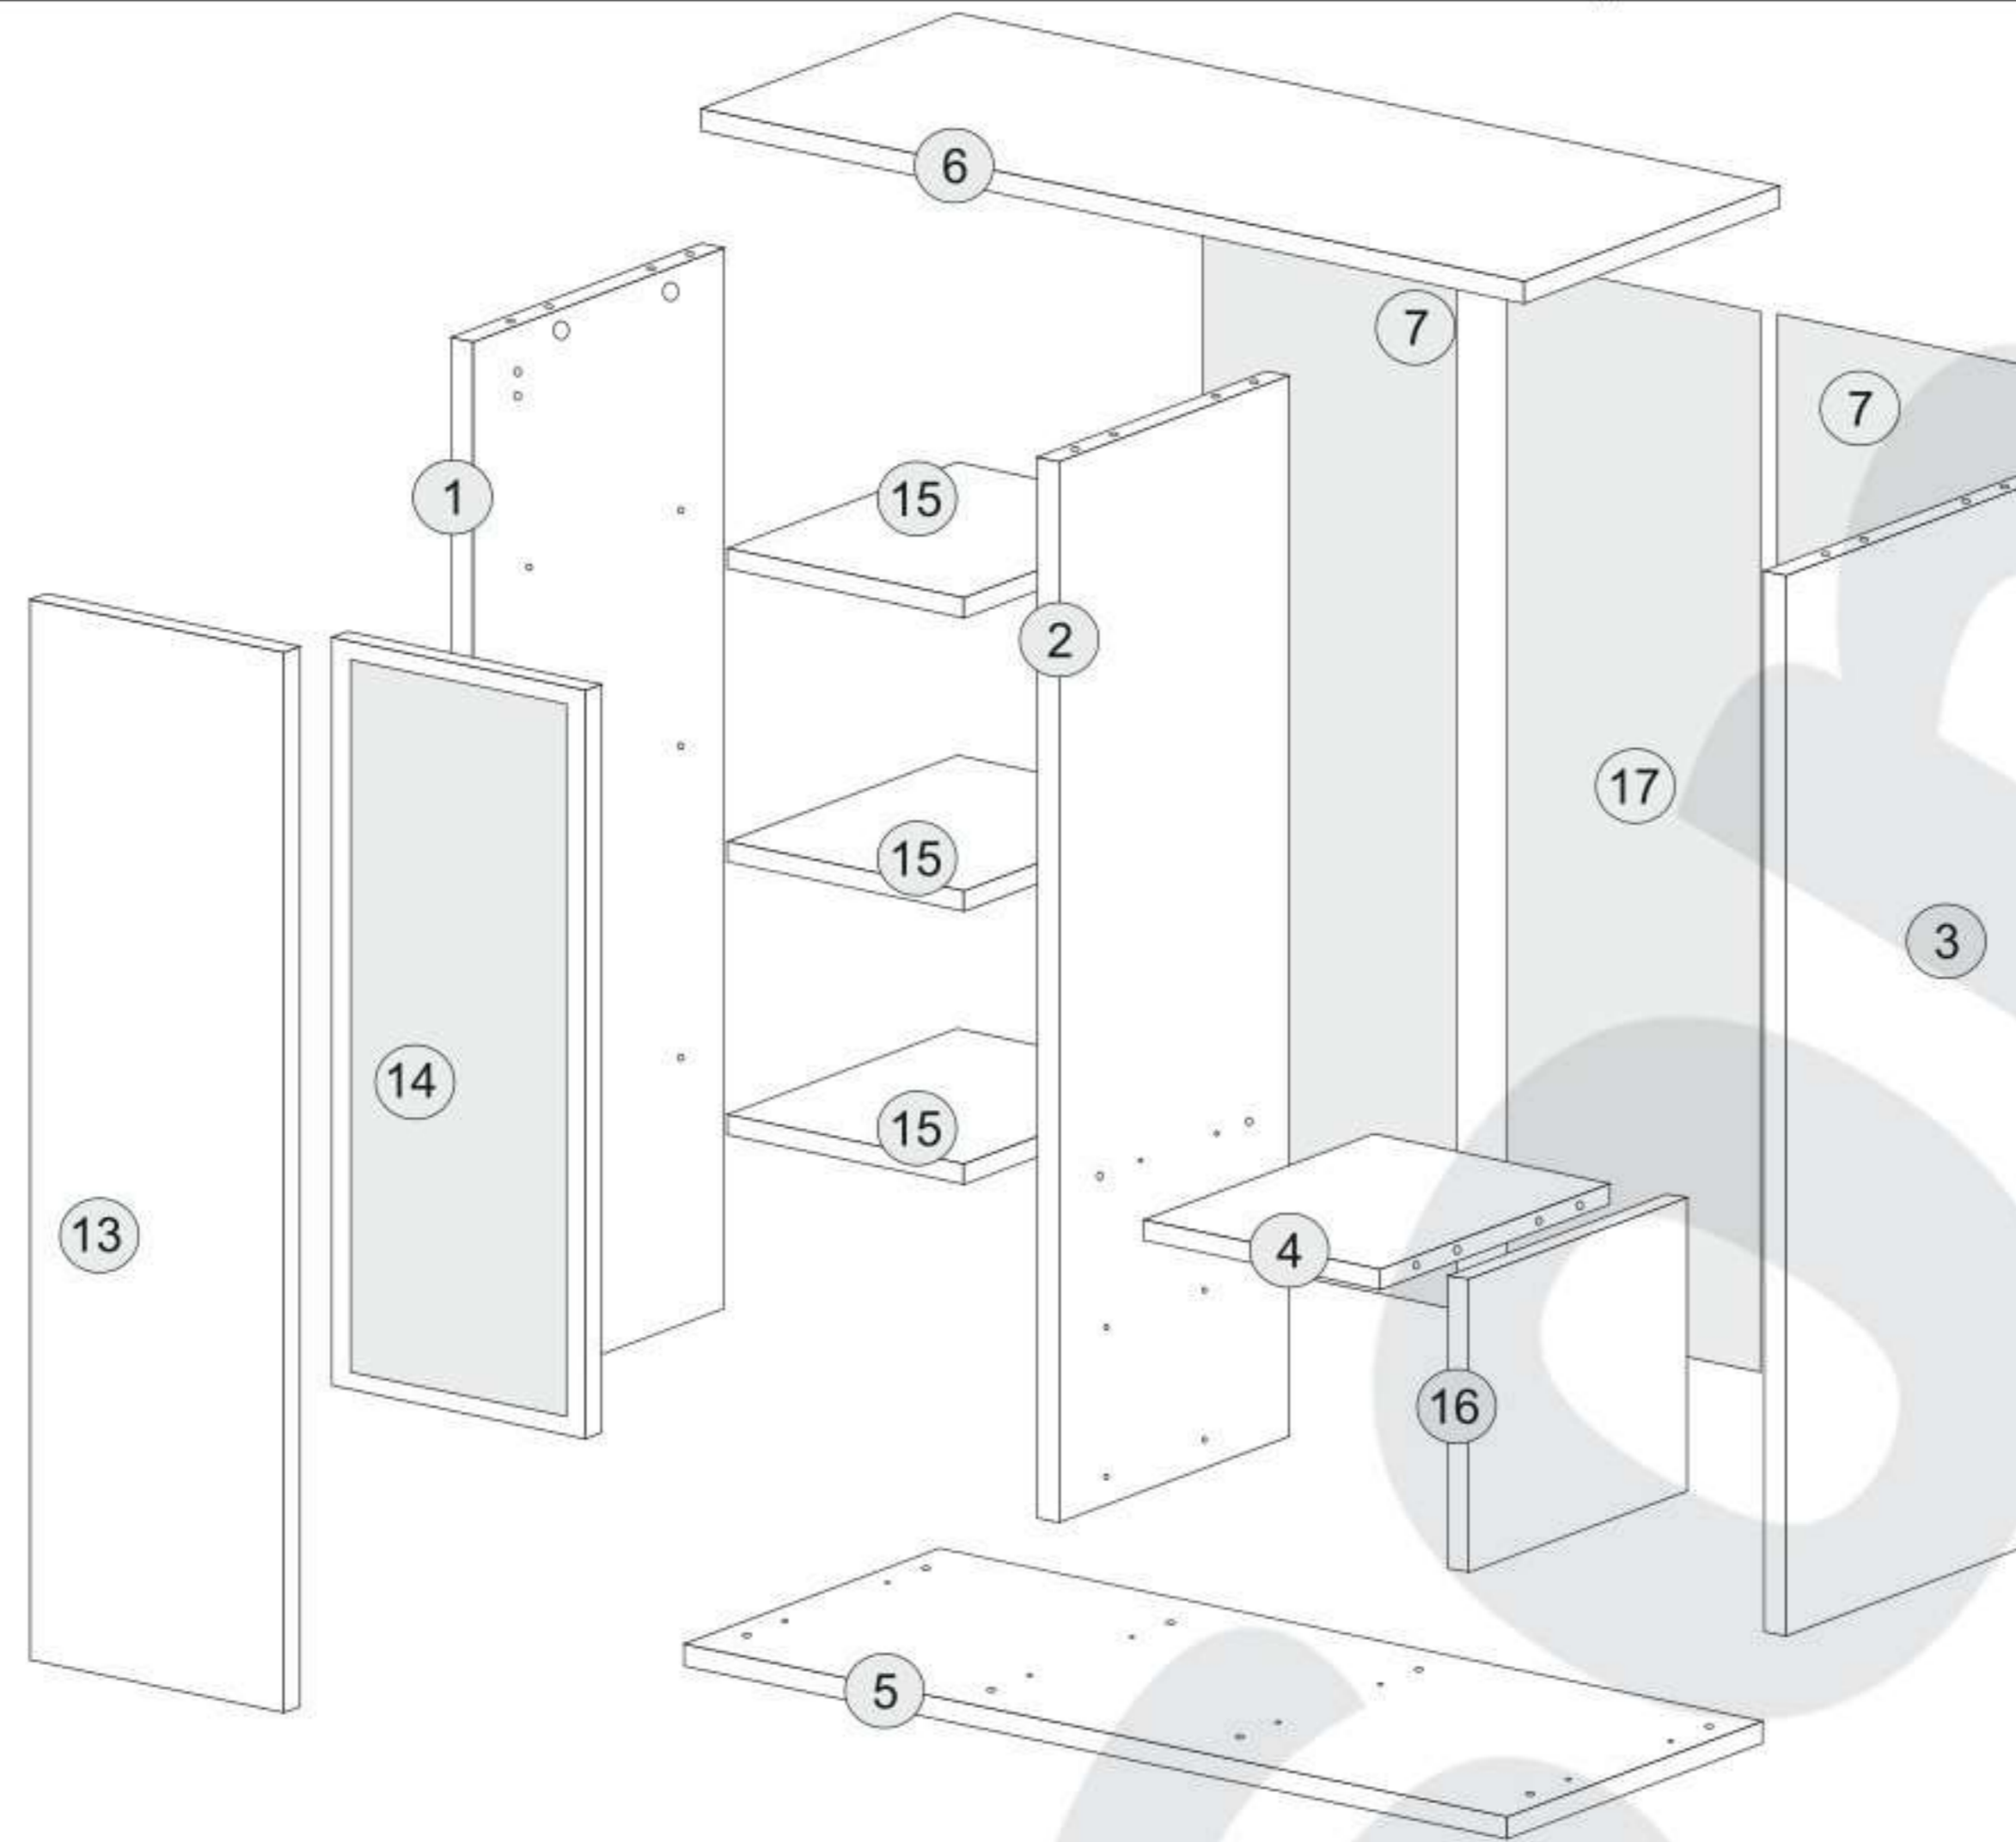 
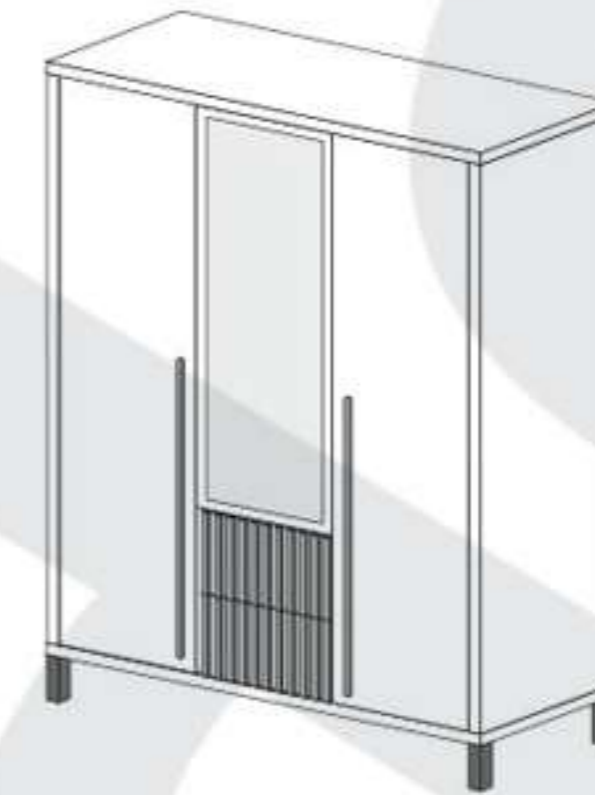 


LENTEY 120 (Szafa / Skriňa / Szekrény)


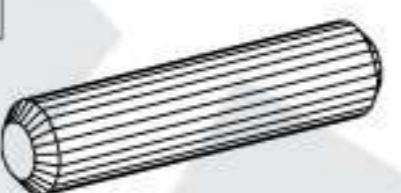 
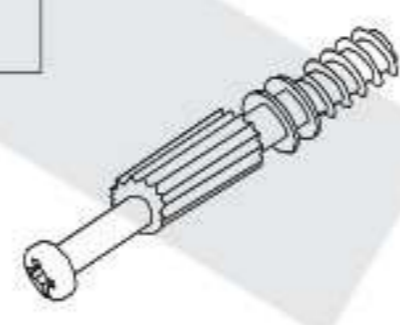 
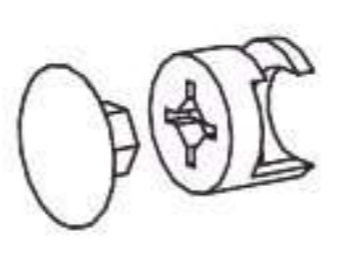 
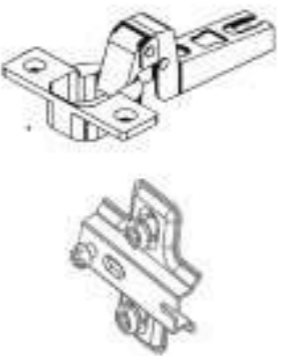 


 

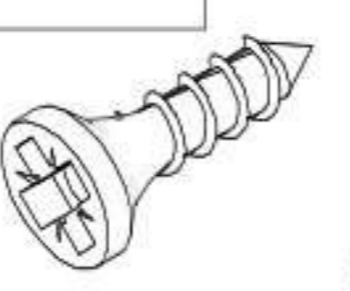 

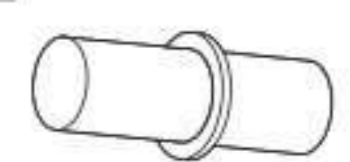 
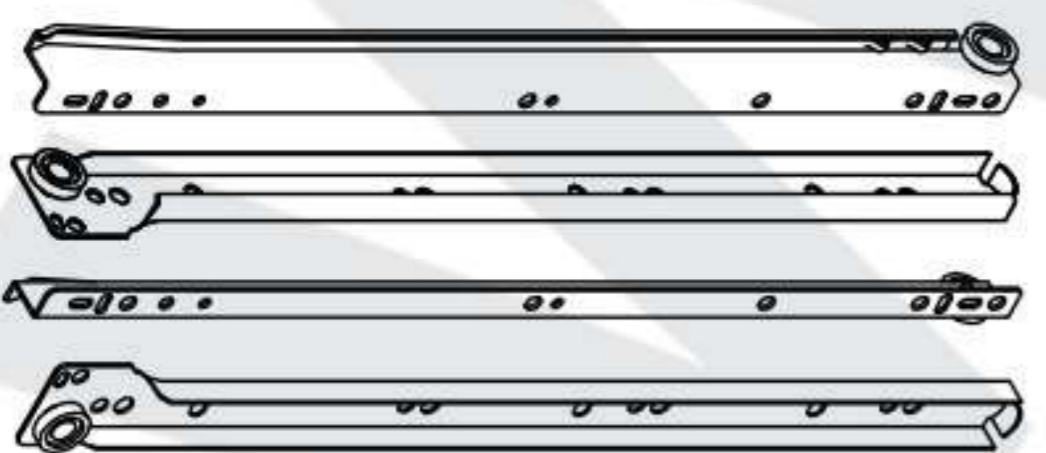 



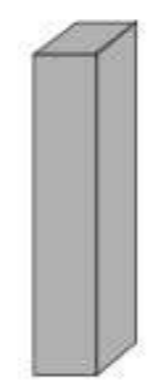 
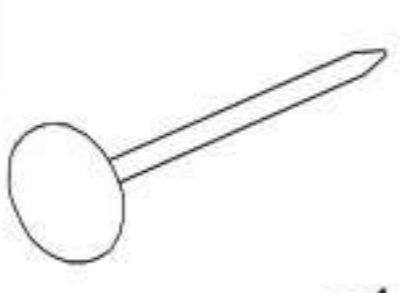 
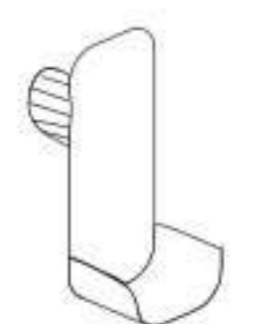 
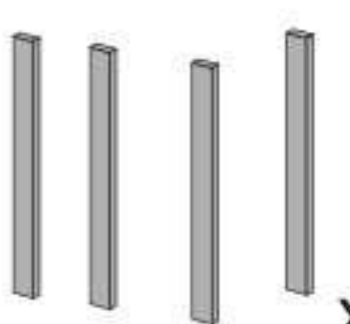 

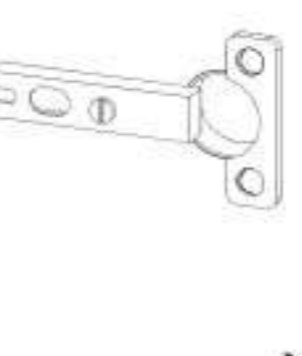 
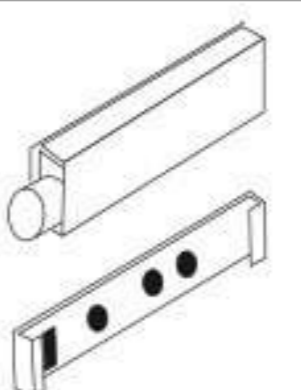 
- | | | |
|----|----------------------|-----------------------|
| PL | Instrukcja montażu | Karta gwarancyjna |
| D | Aufbauanleitung | der Garantieschein |
| GB | Assembly instruction | Guarantee certificate |
| SK | Návod na montáž | Záručný list |
| HU | Szerelési útmutató | Garancialevél |




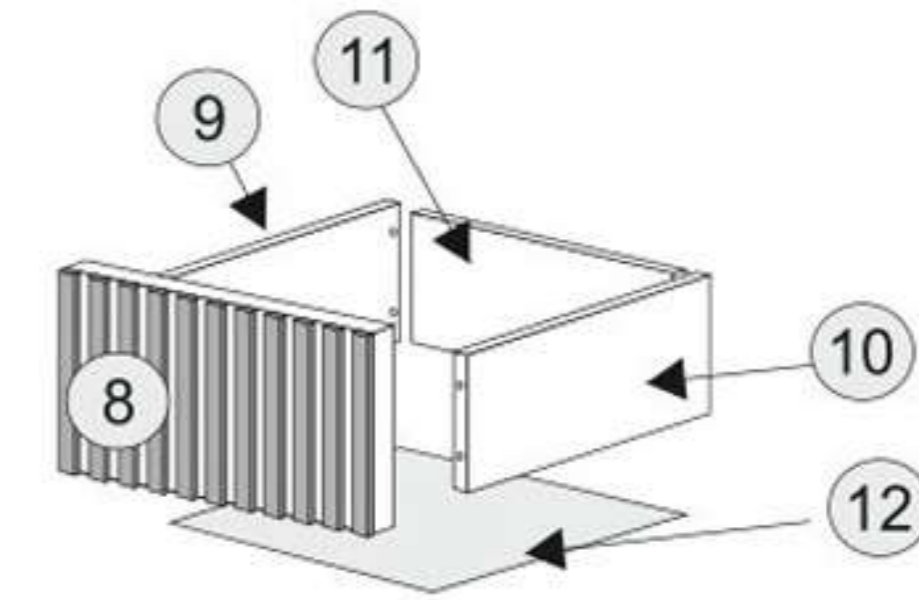





	Wymiar / Size / Rozmer / Méter	X
1	1868x500	1
2	1868x482	1
3	1868x500	1
4	358x482	1
5	1196x500	1
6	1196x500	1
7	1898x409	2
8	384x242	2
9	400x150	2
10	400x150	2
11	300x150	2
12	405x330	2
13	1862x384	2
14	1370x384	1
15	386x482	3
16	509x482	1
17	1898x374	1











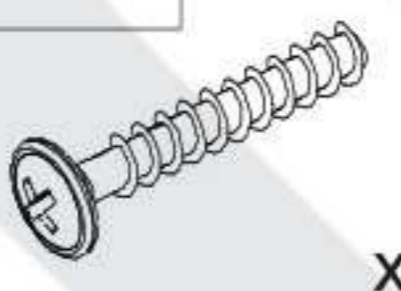






Akcesoria - Accessories - die Accessoires - Príslušenstvo - Tartozékok


A	 x1	B	 x34	C	 x18	D	 x18	E	 x6	L	 x9
F 3.5x13	 x24	G 4x25	 x47	H	 x2	N 3.5x16	 x10	J	 x2	I	 x12
O	 O1  O2  O3  O4	S	 x5	M.	 x100	K	 x2	LA	 x22		
		DR	 x1	EL	 x2	WE	 x1				

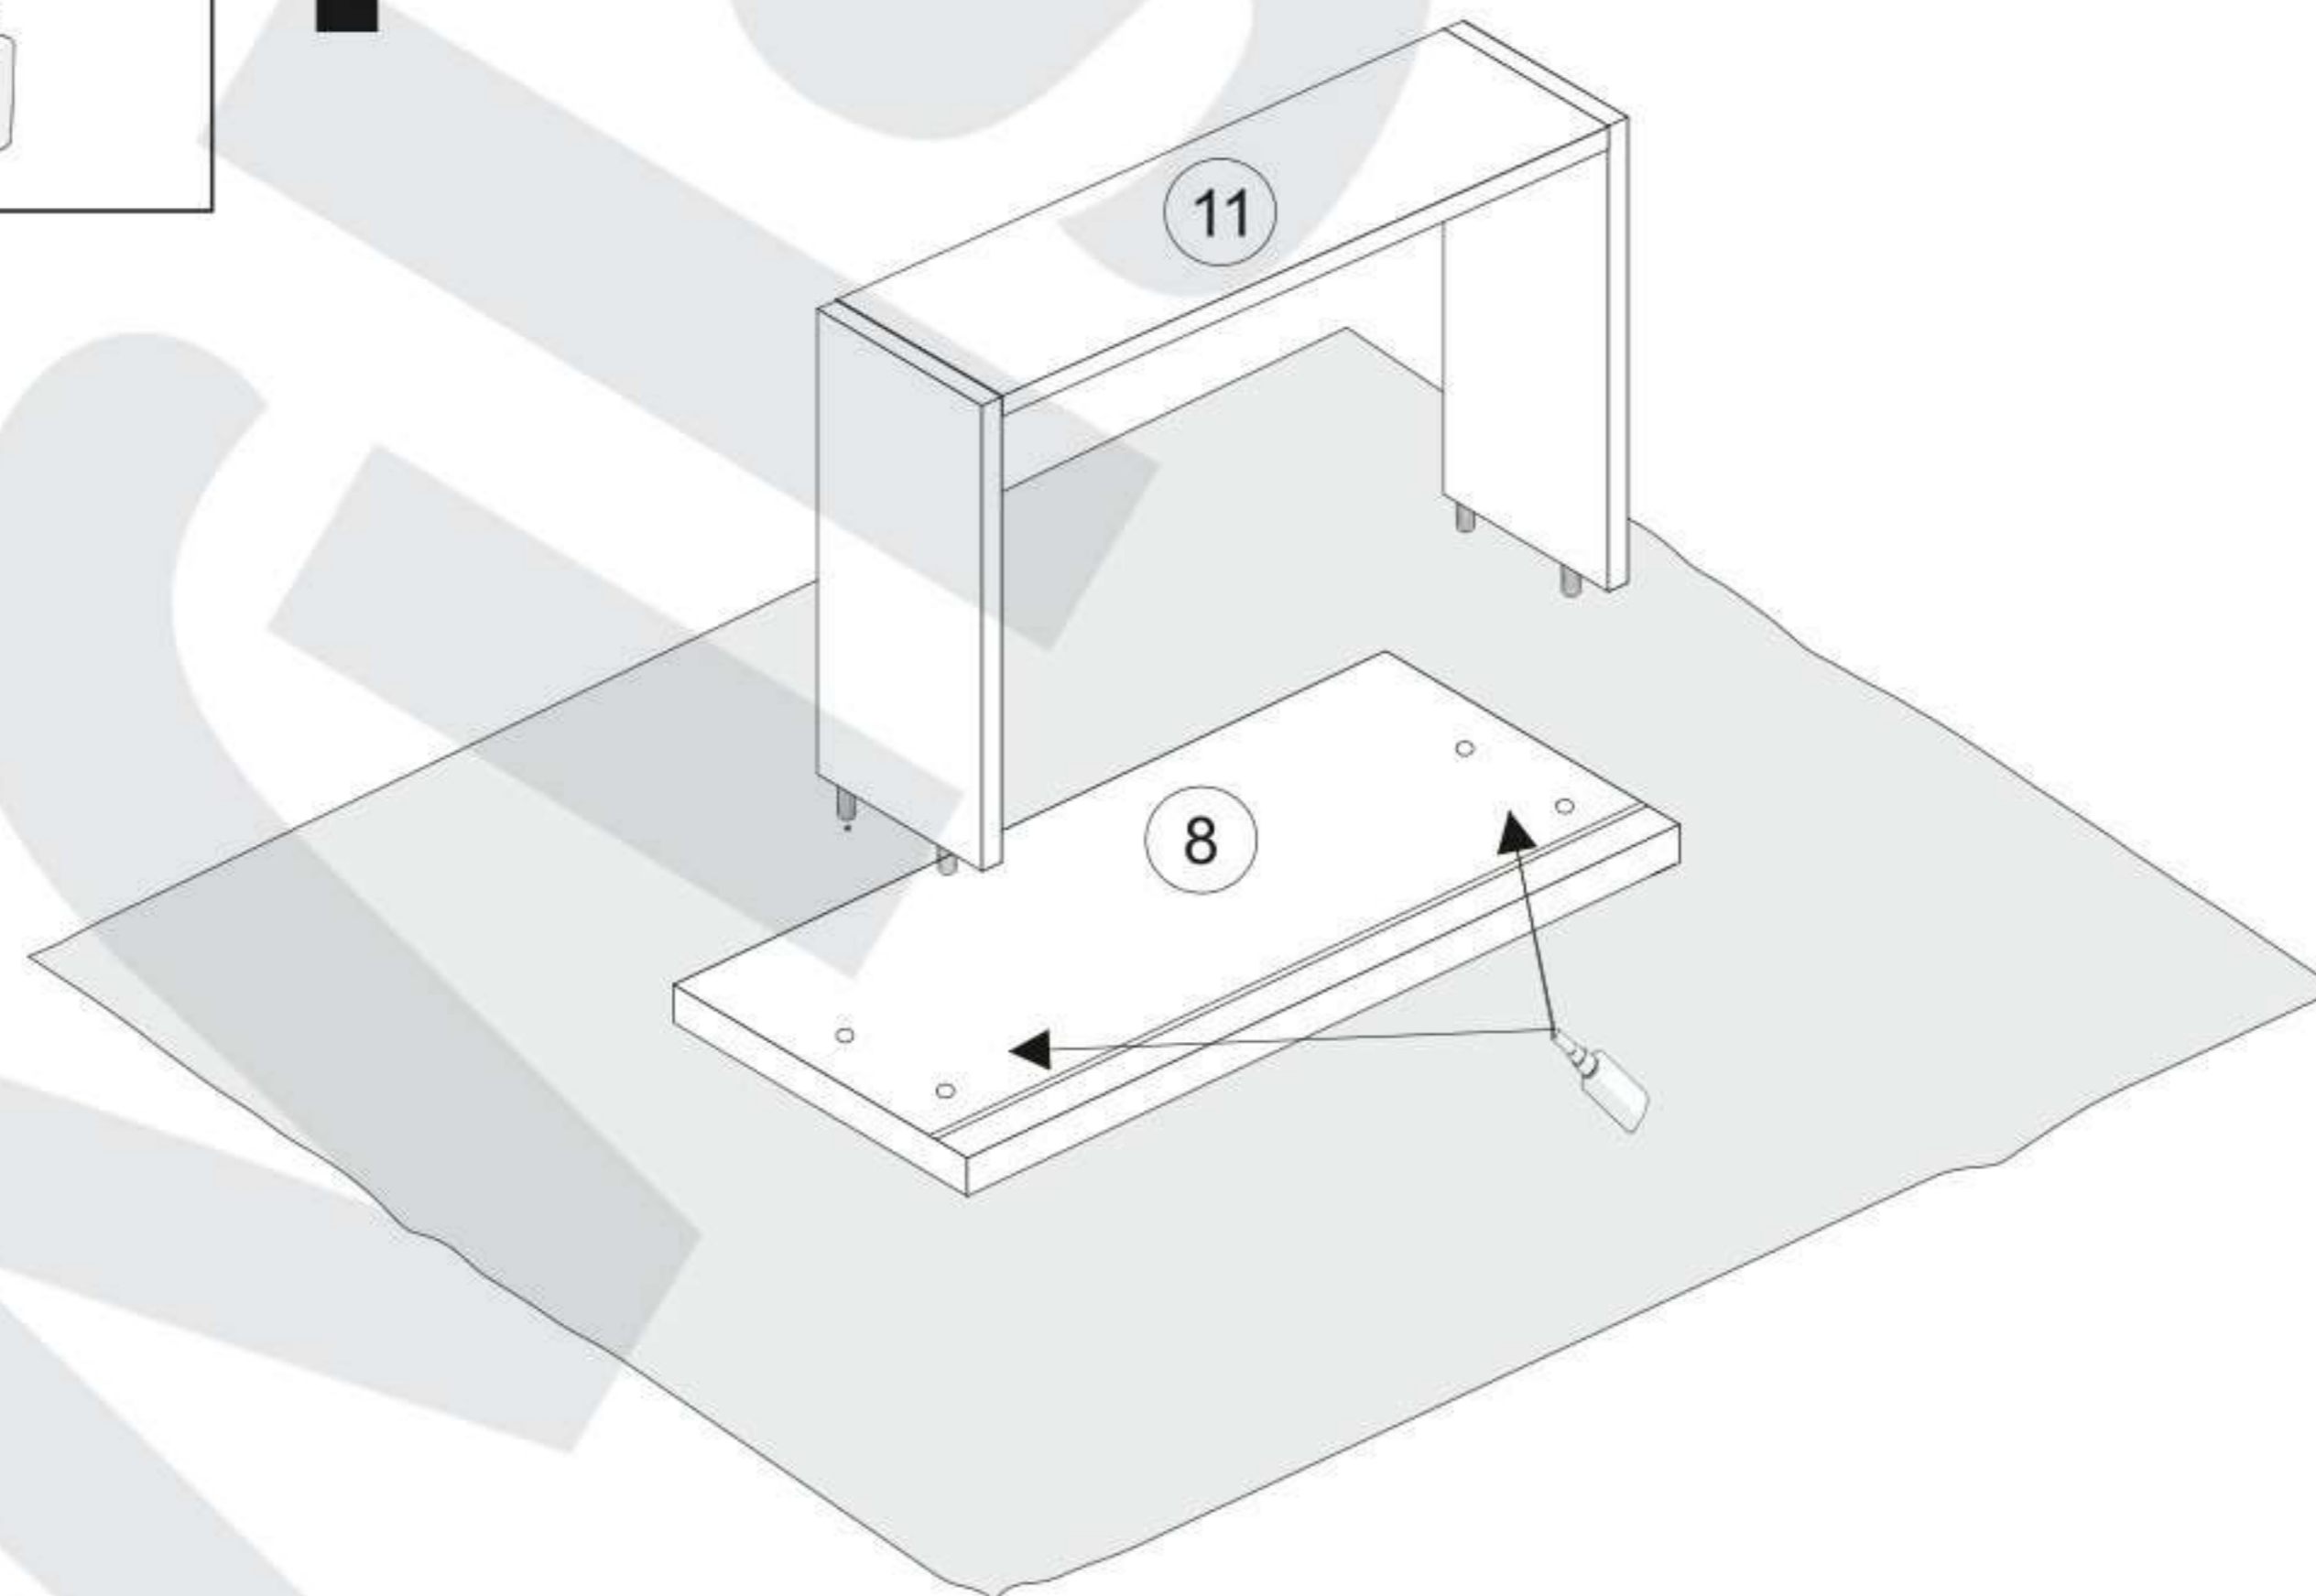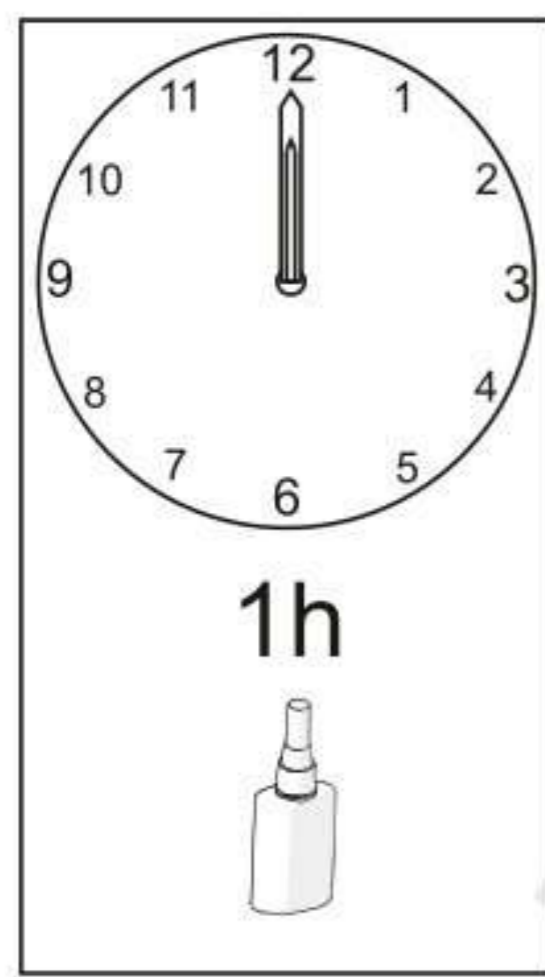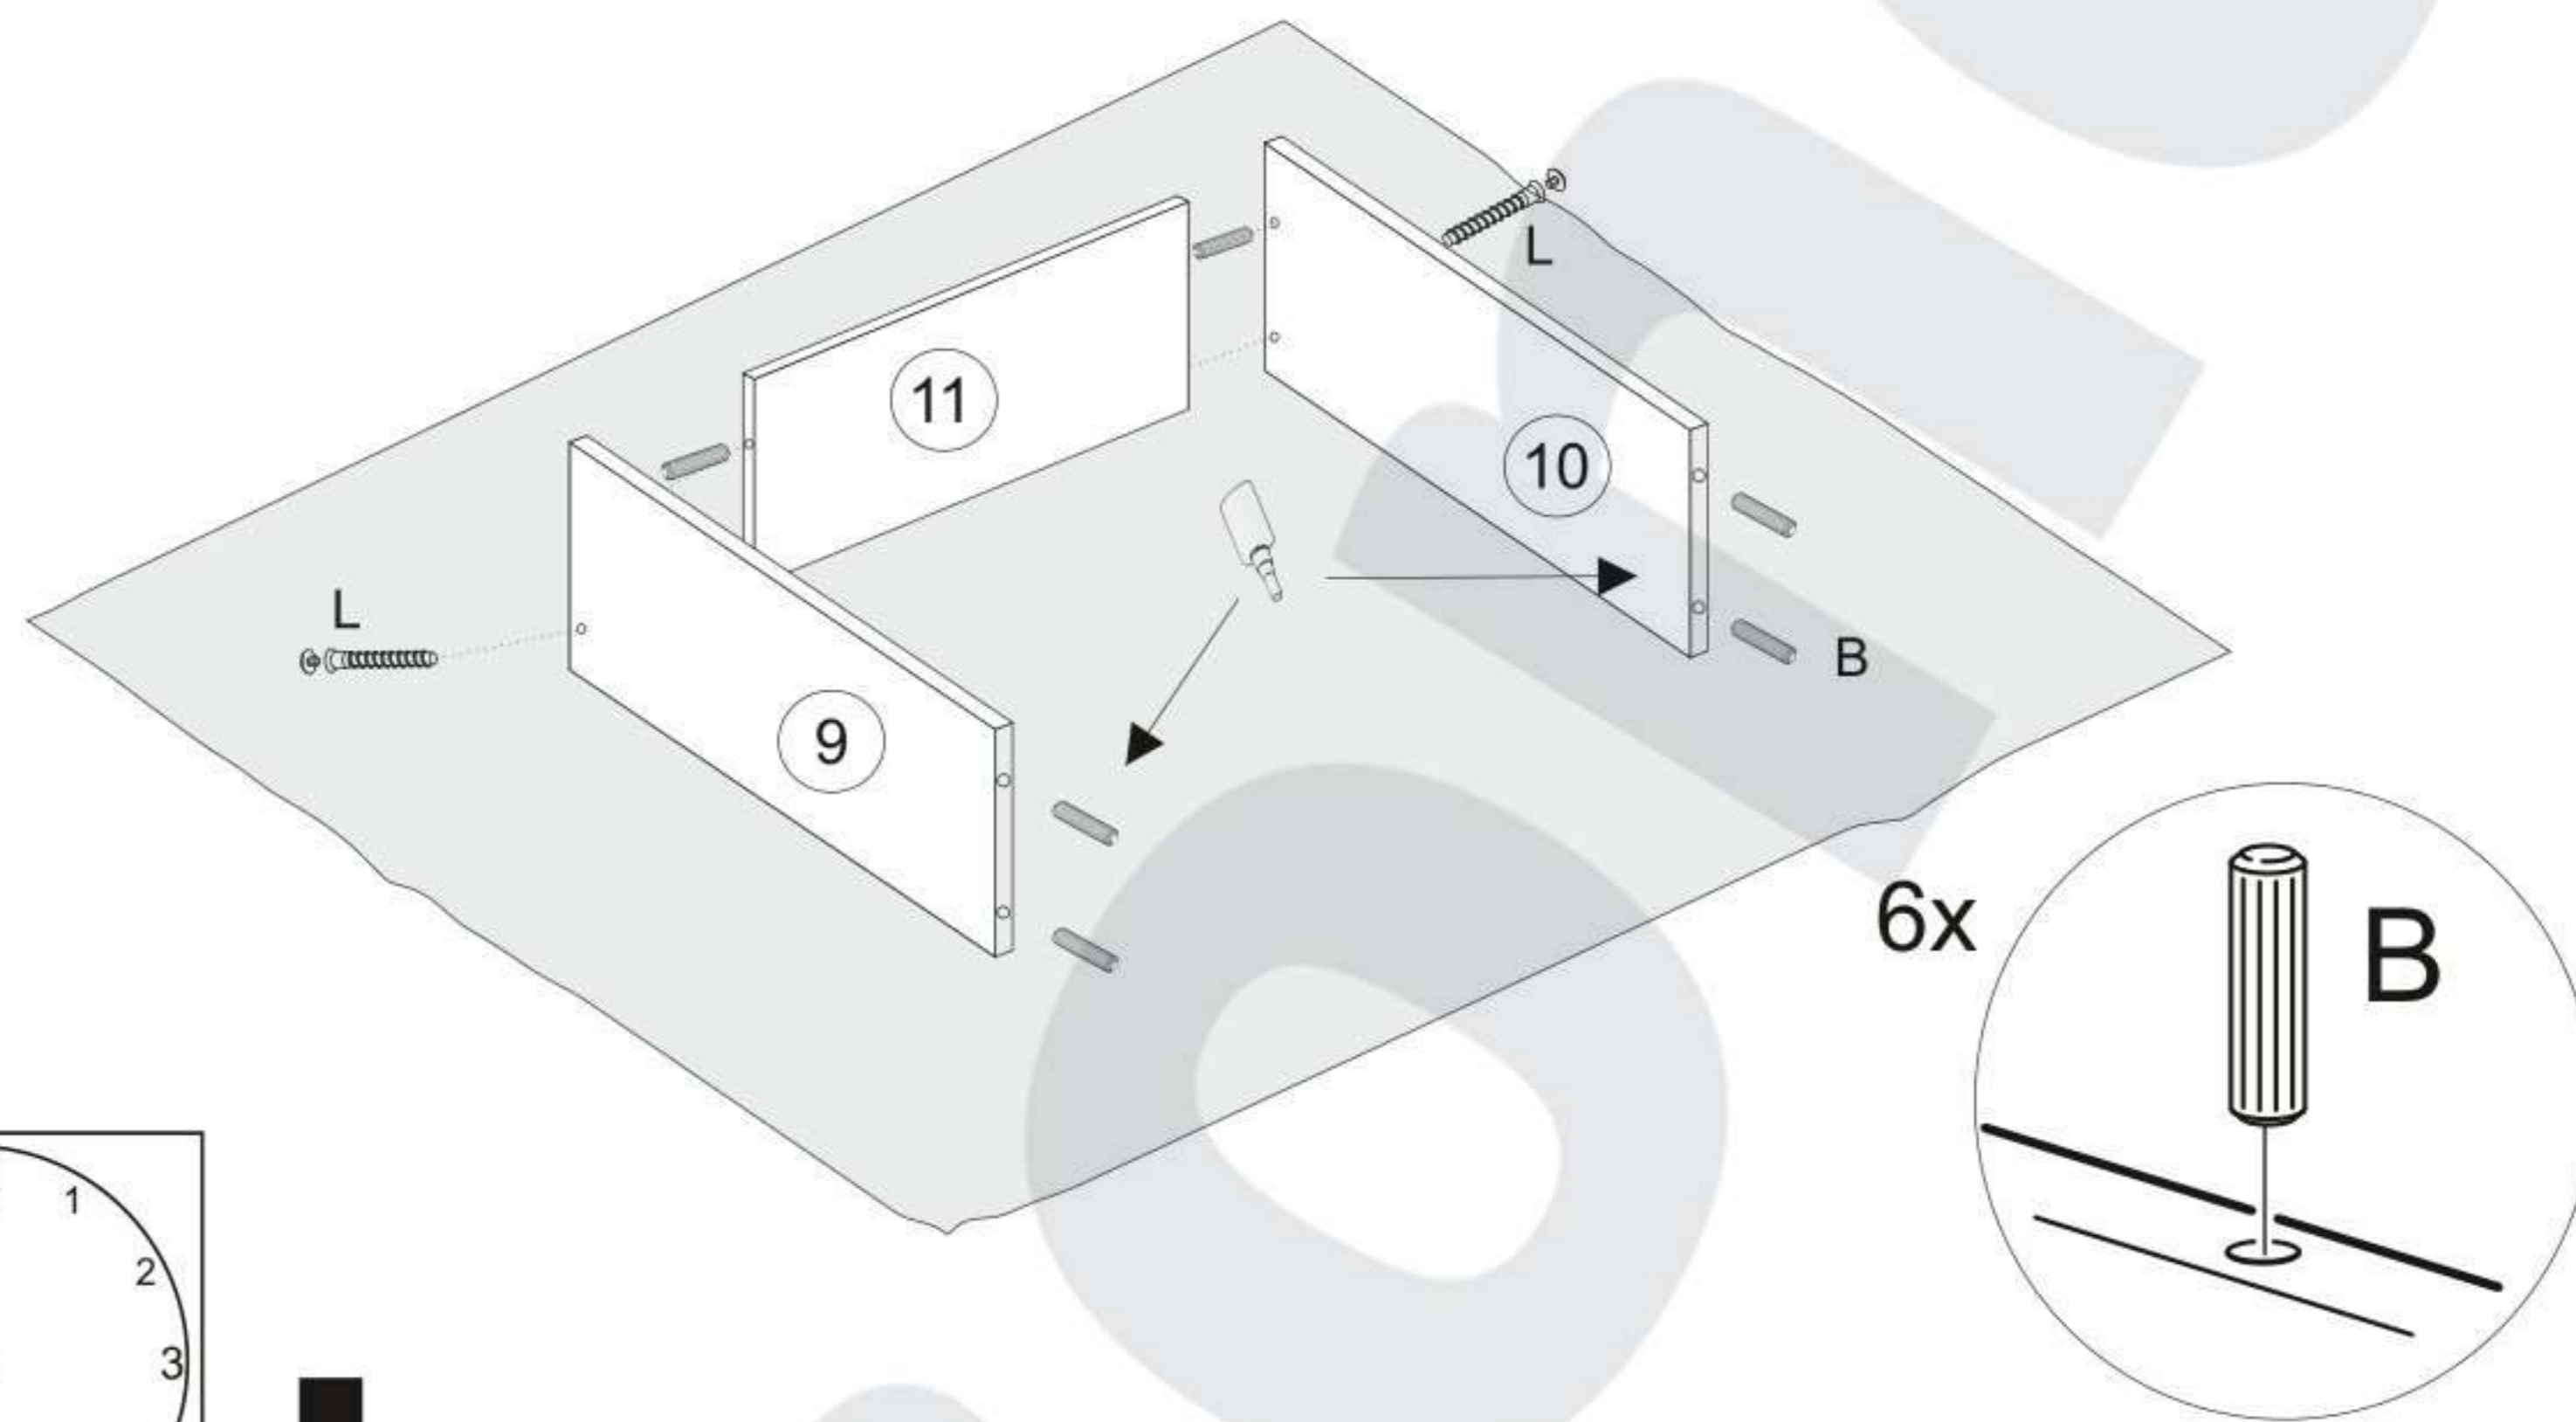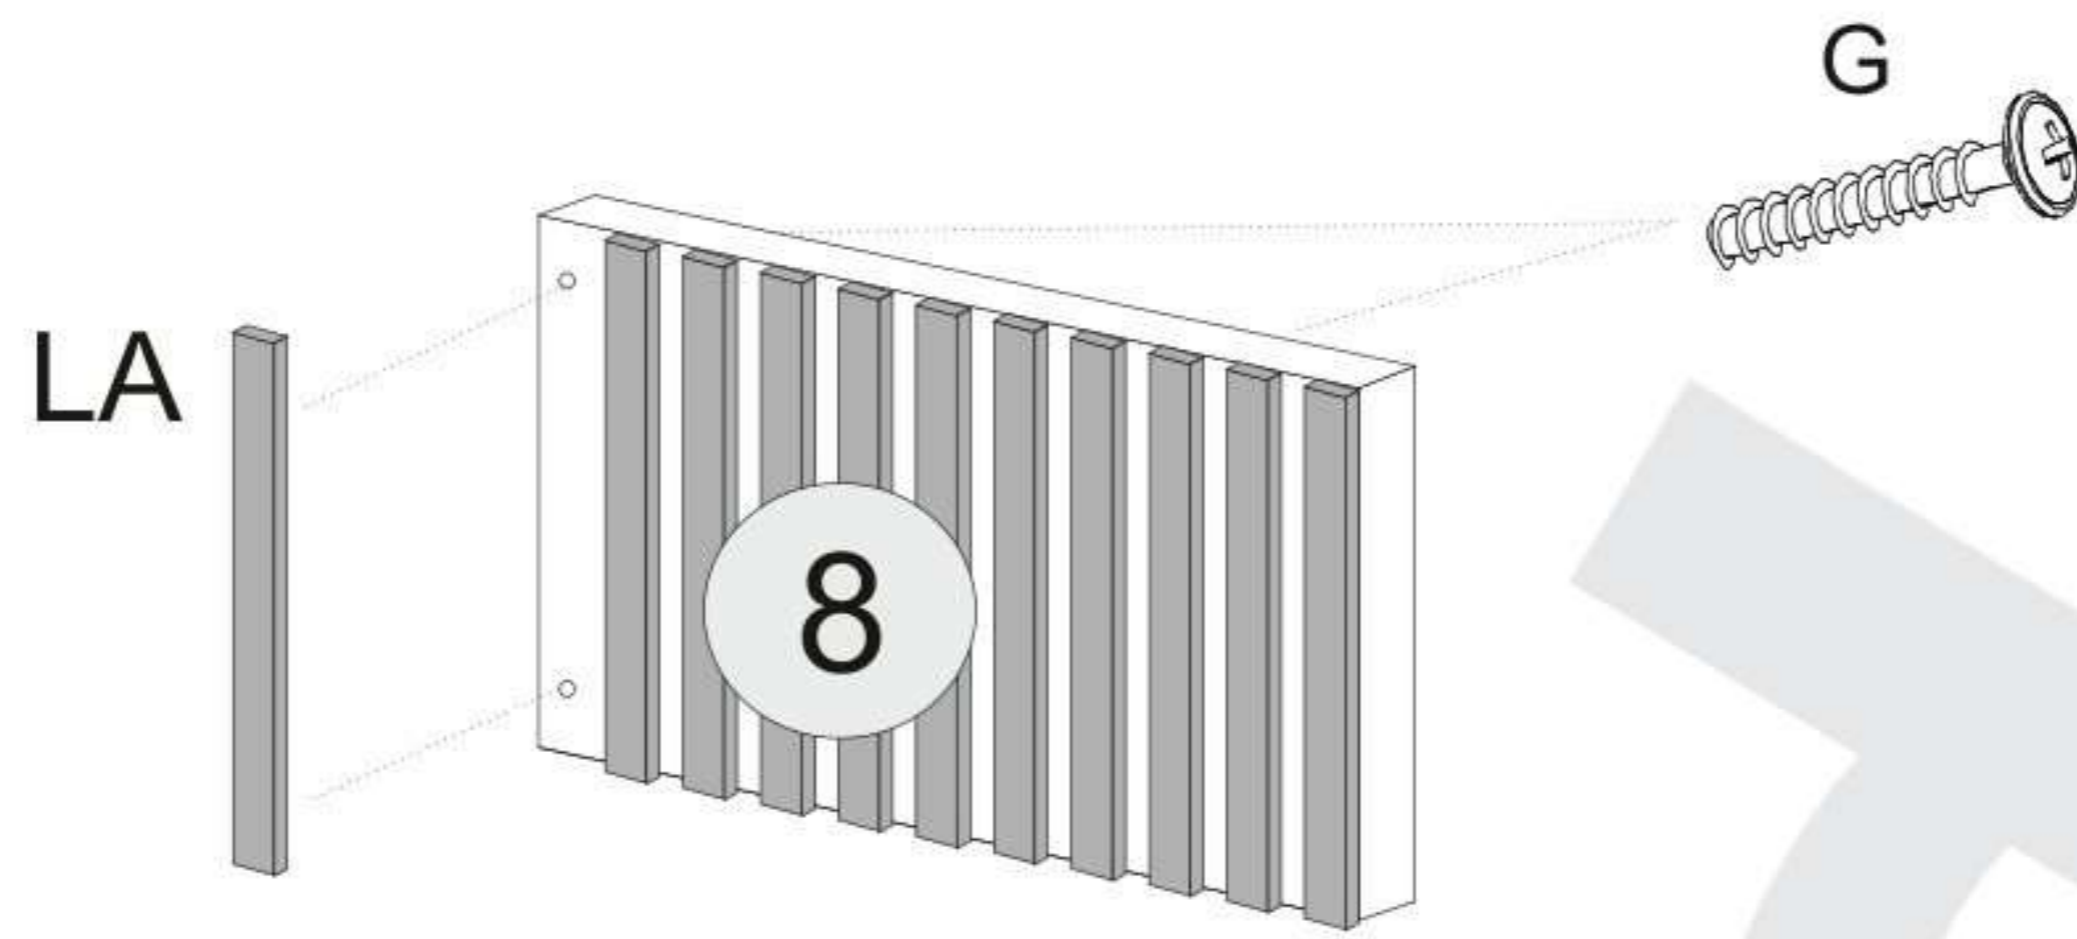    

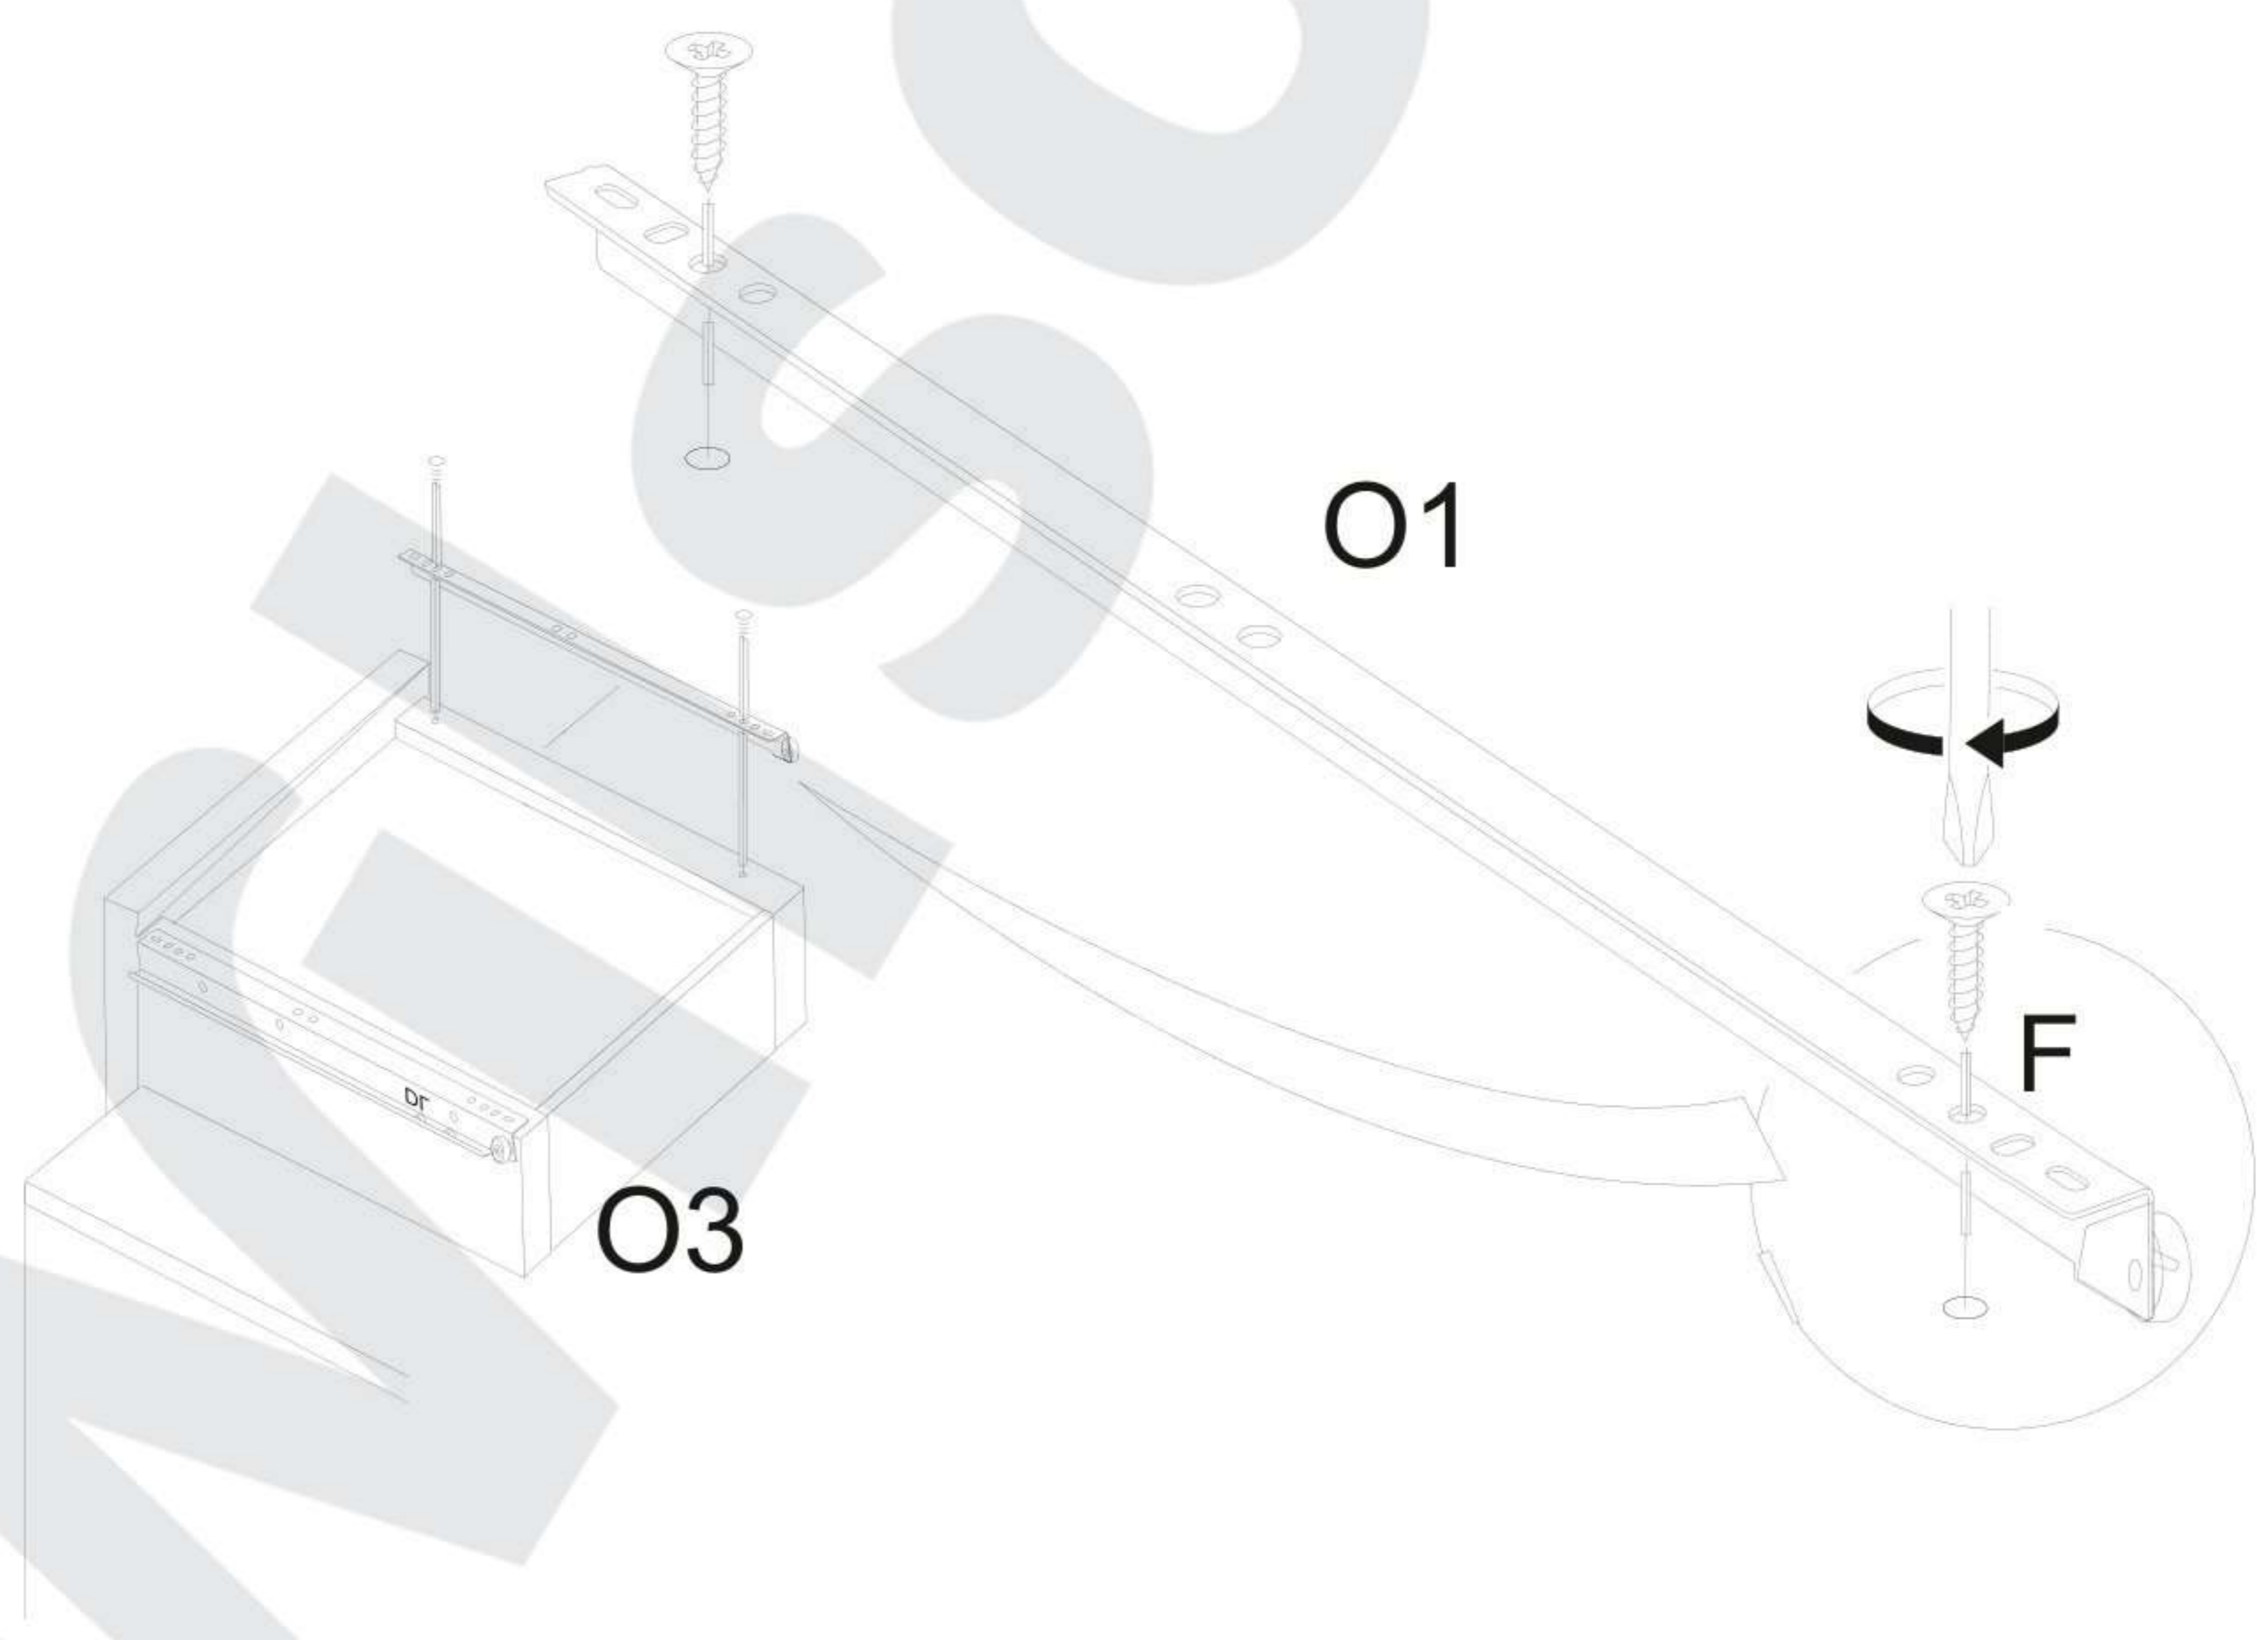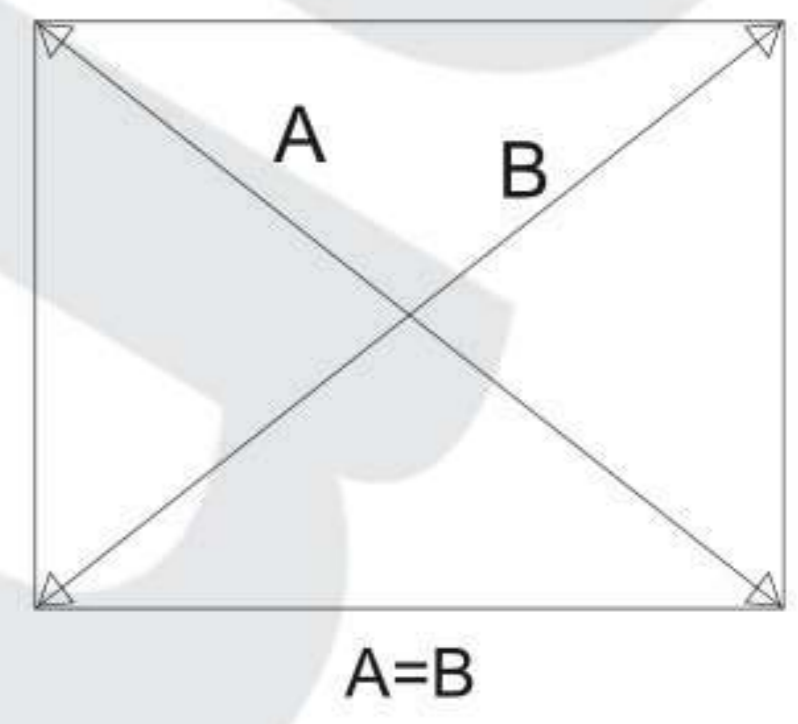  
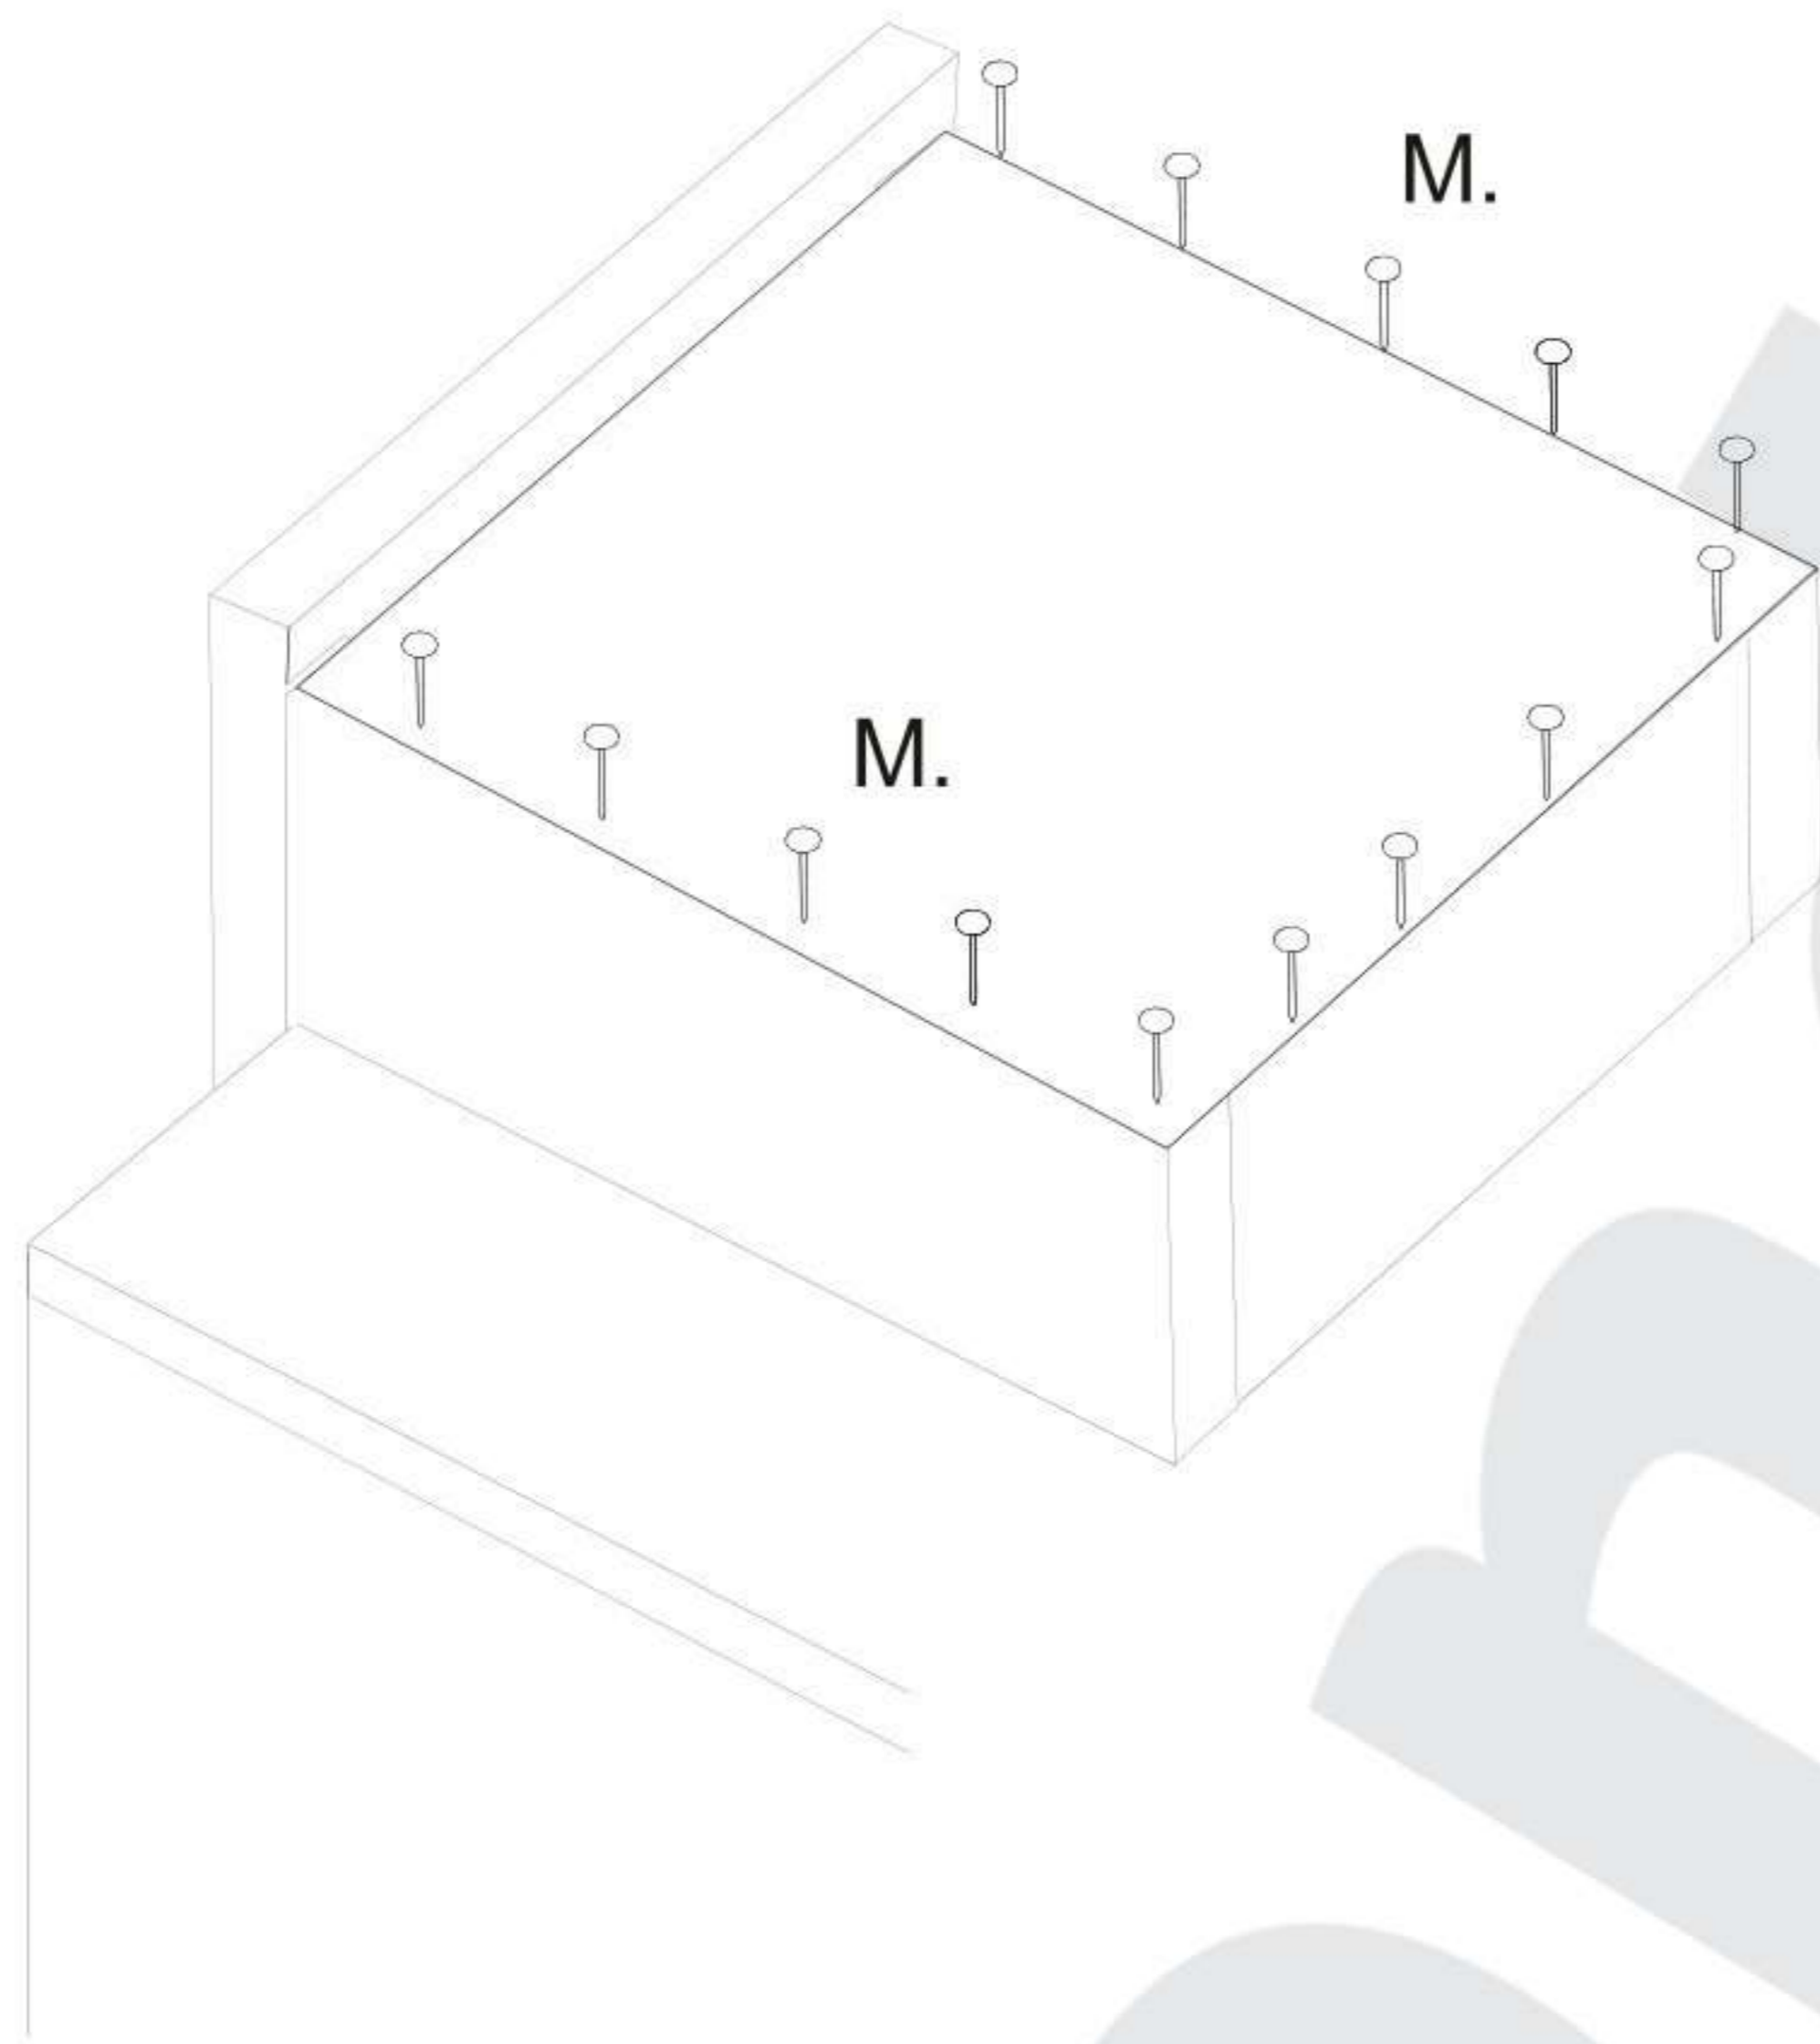 


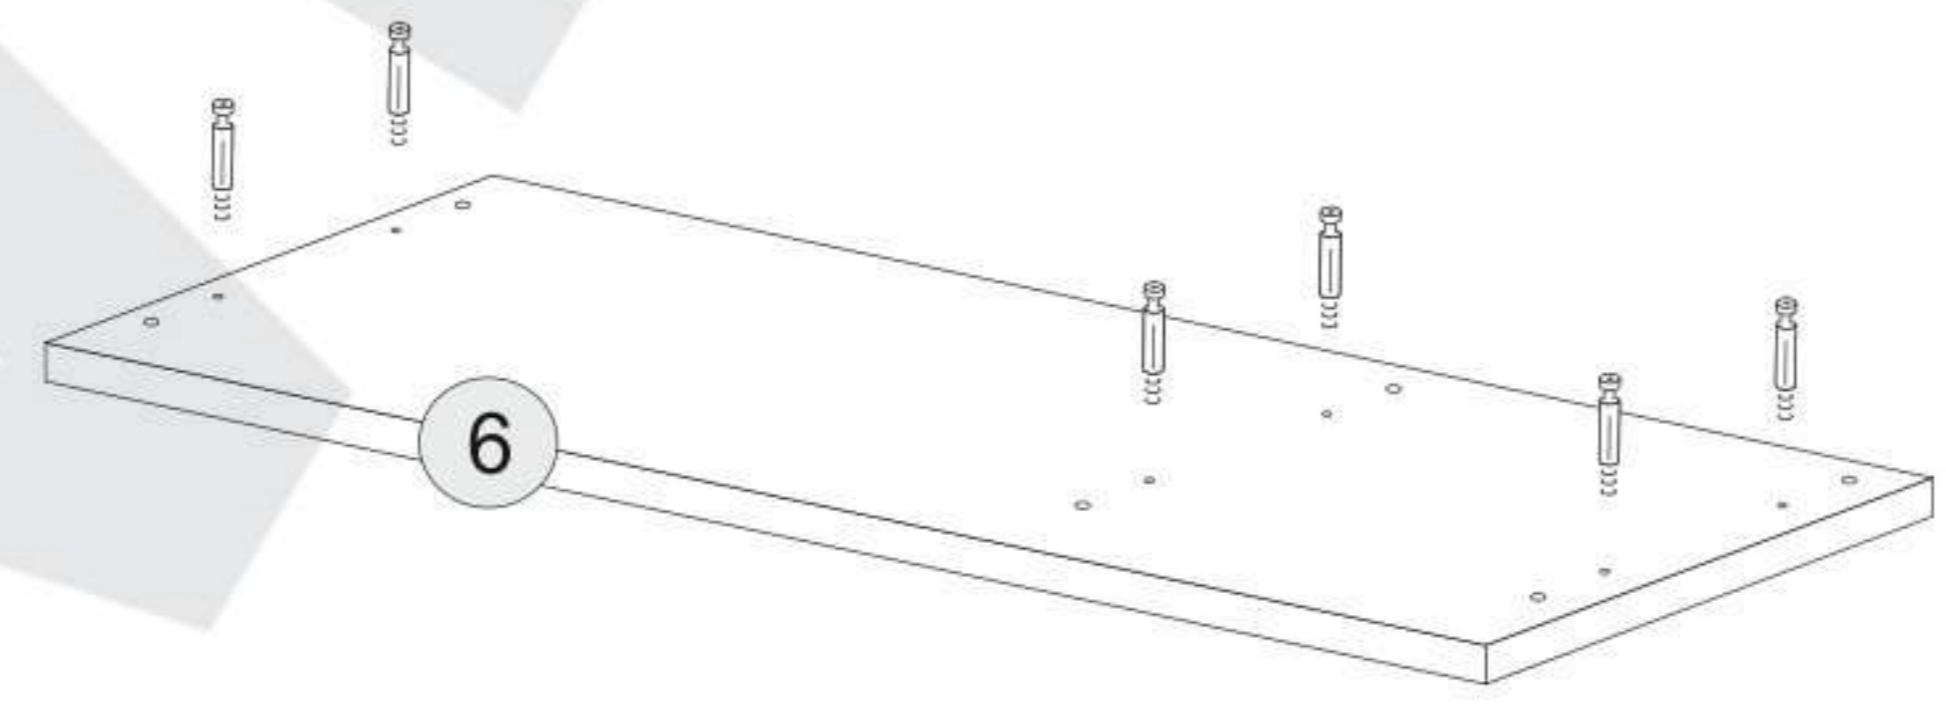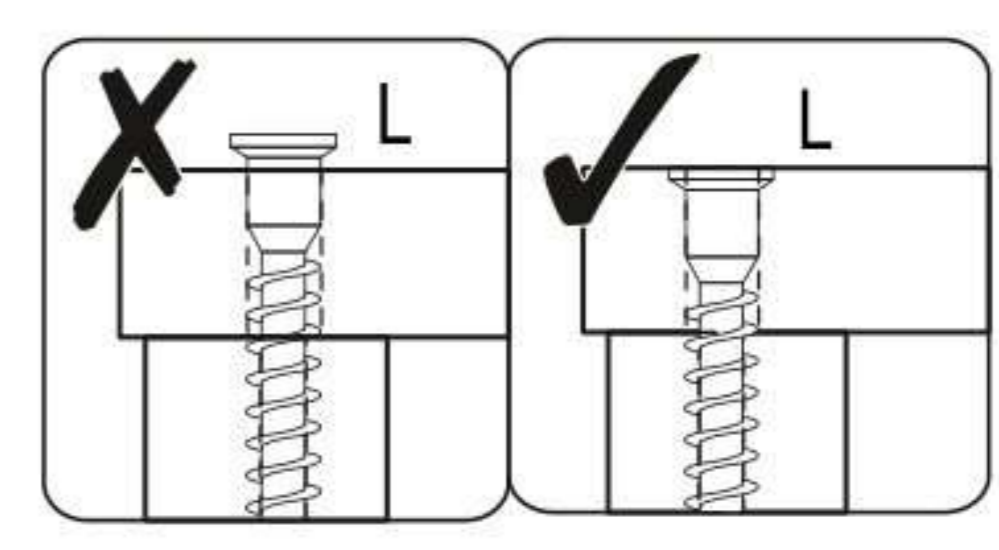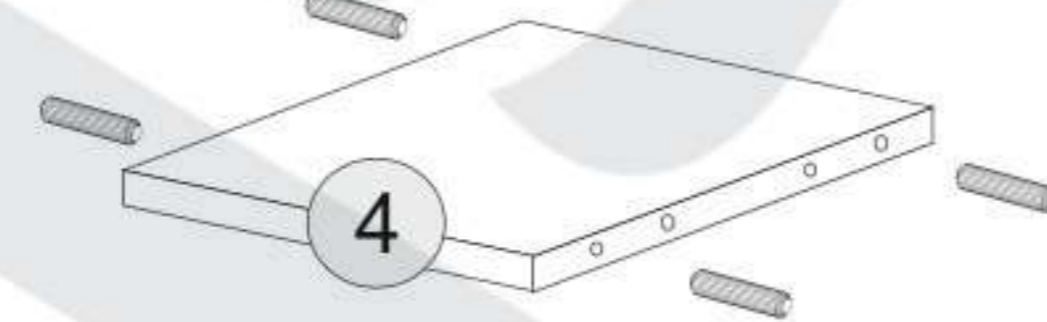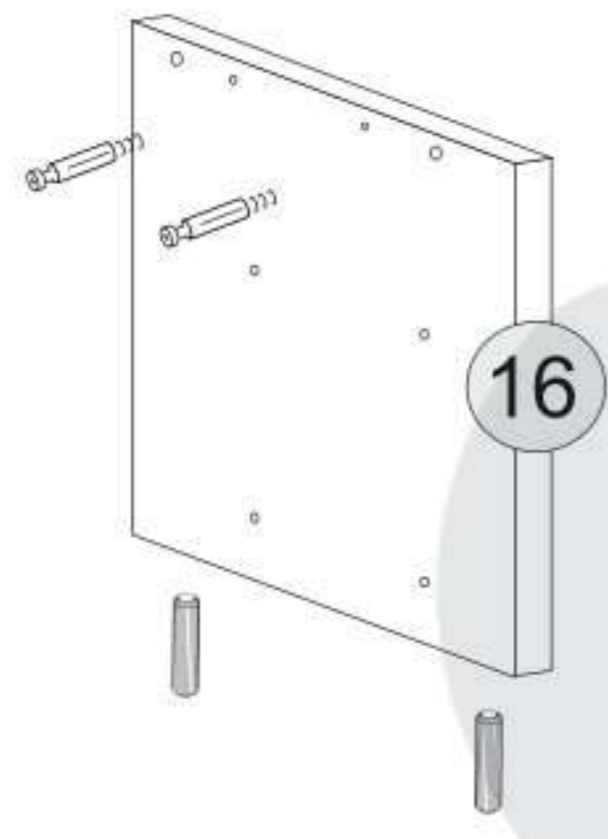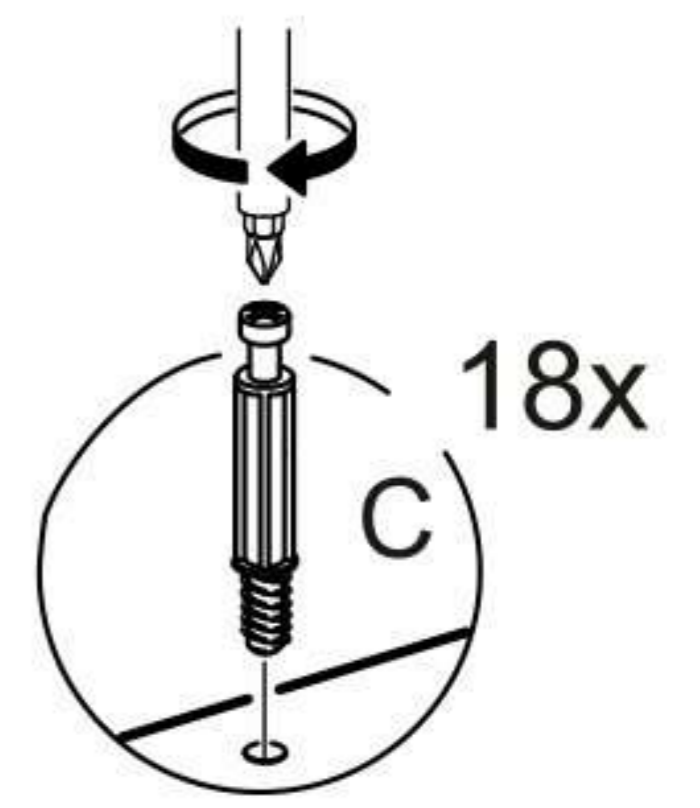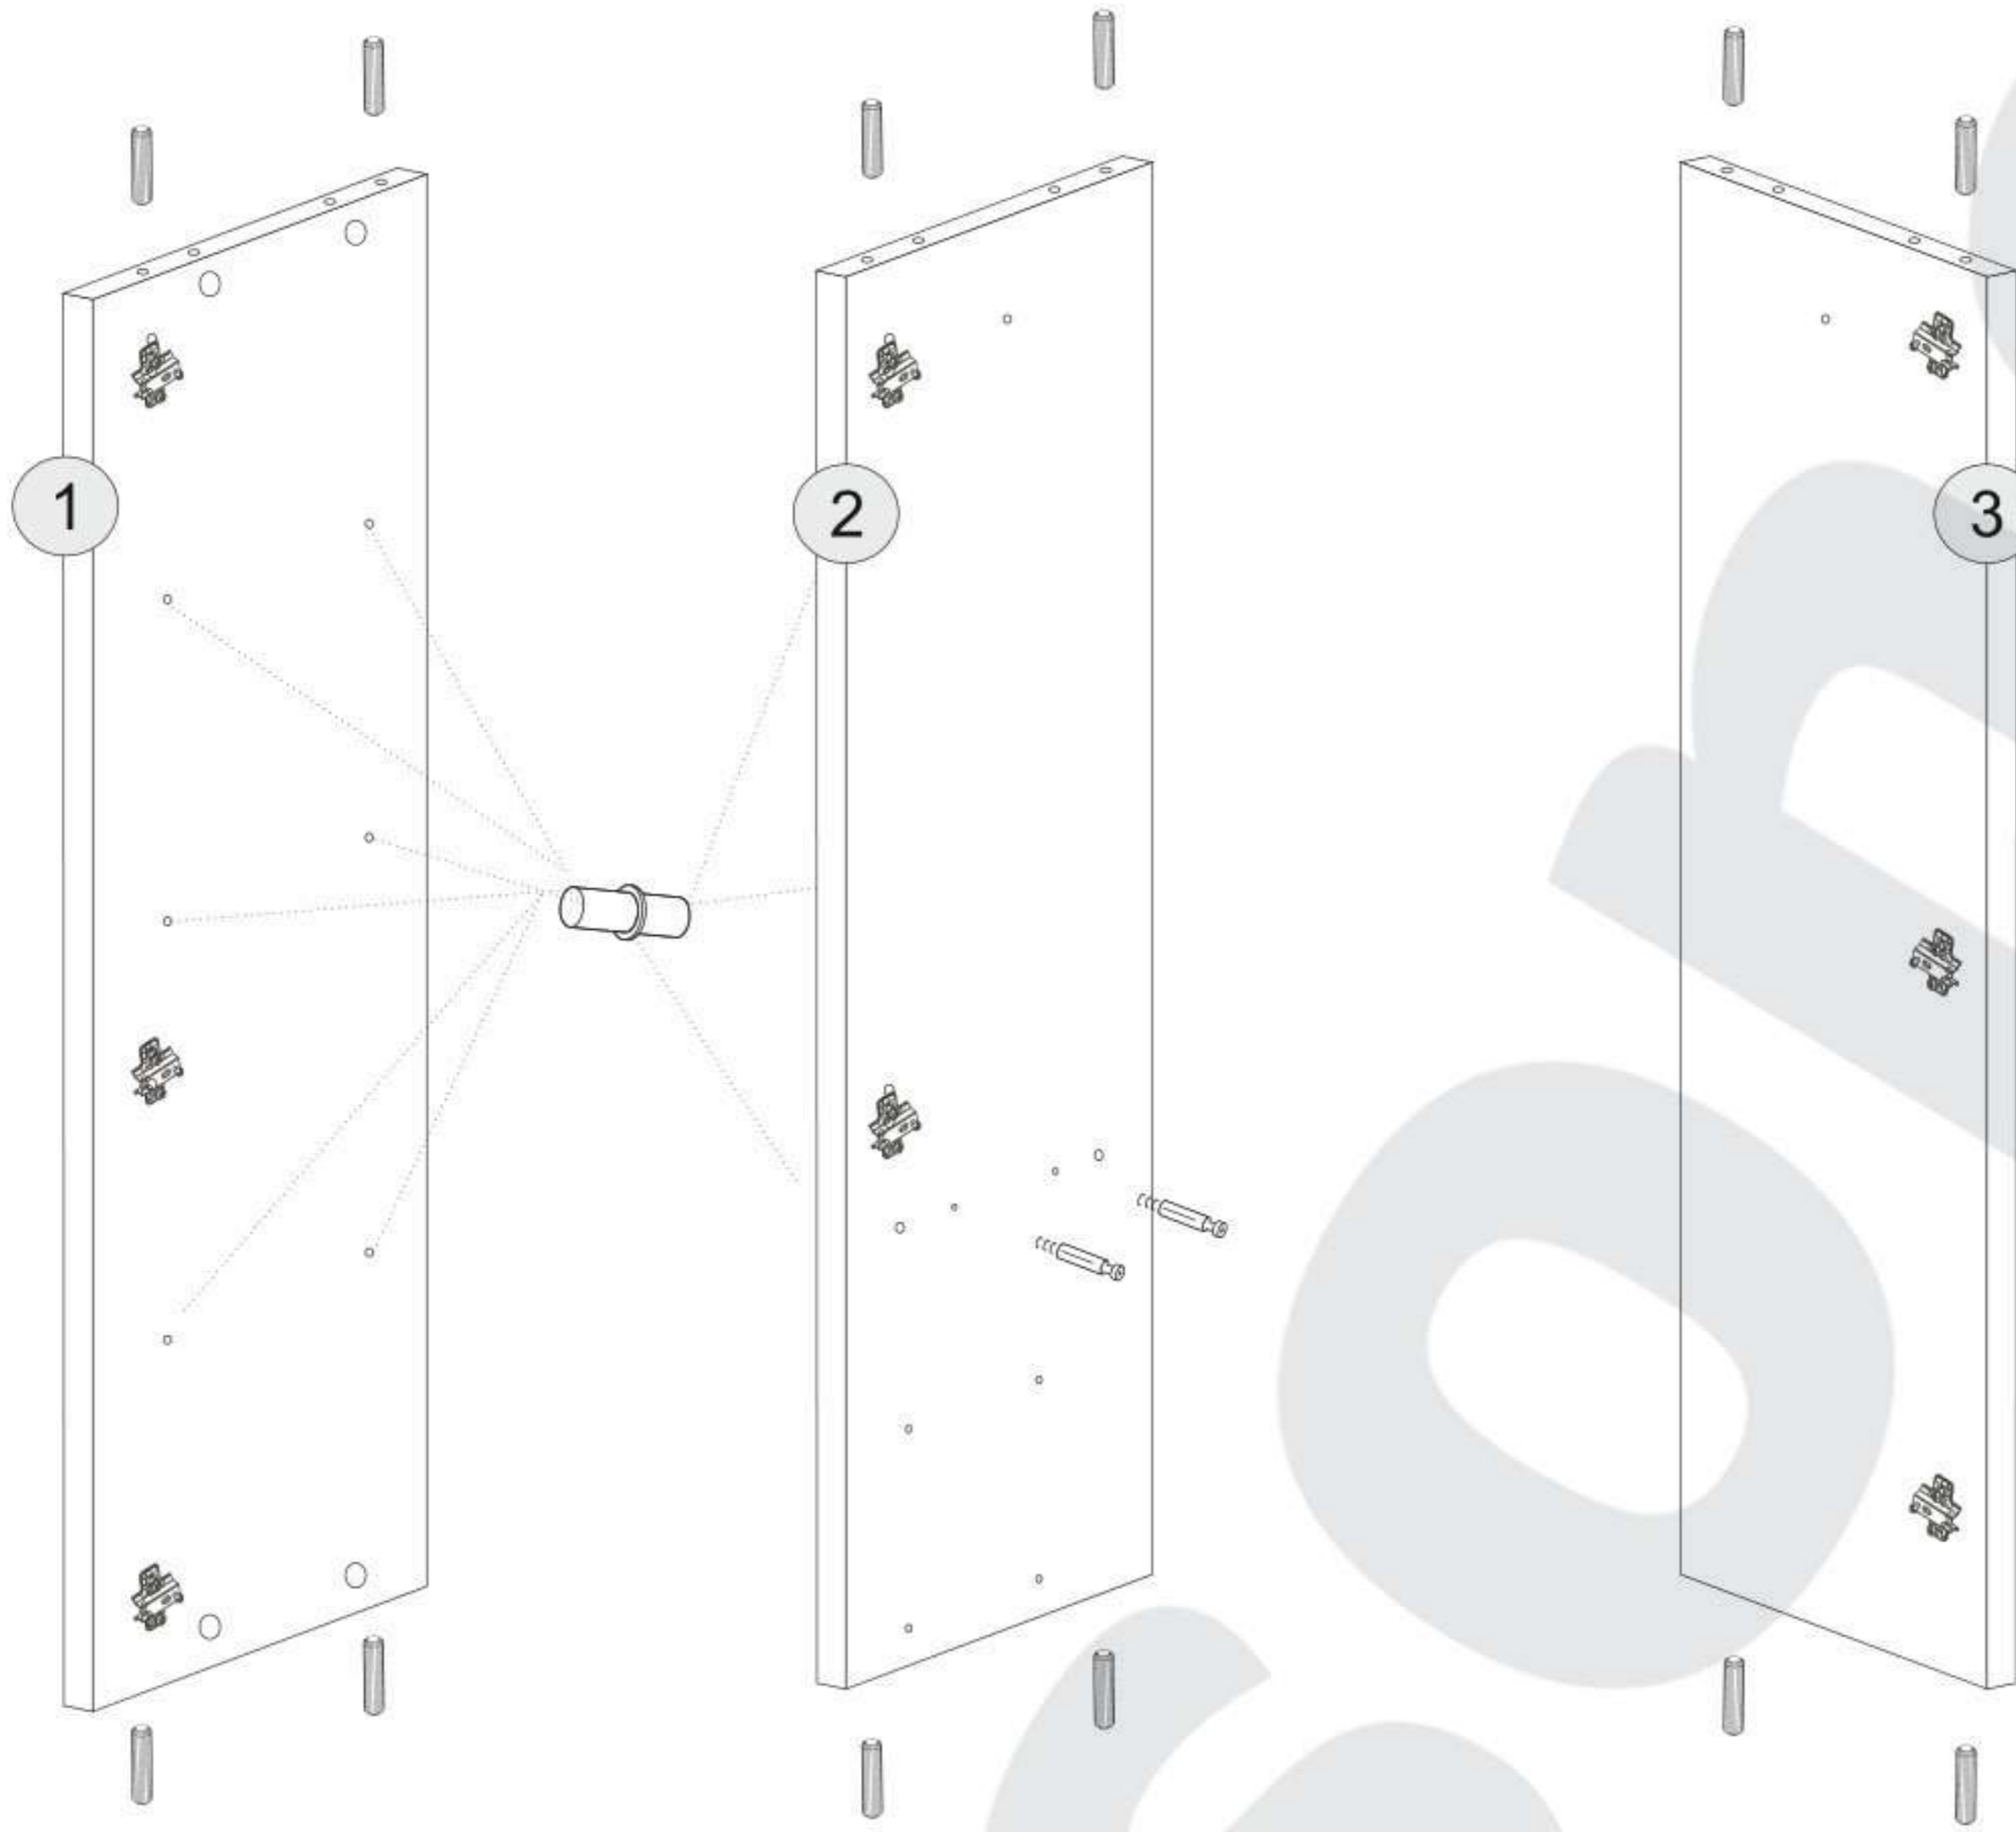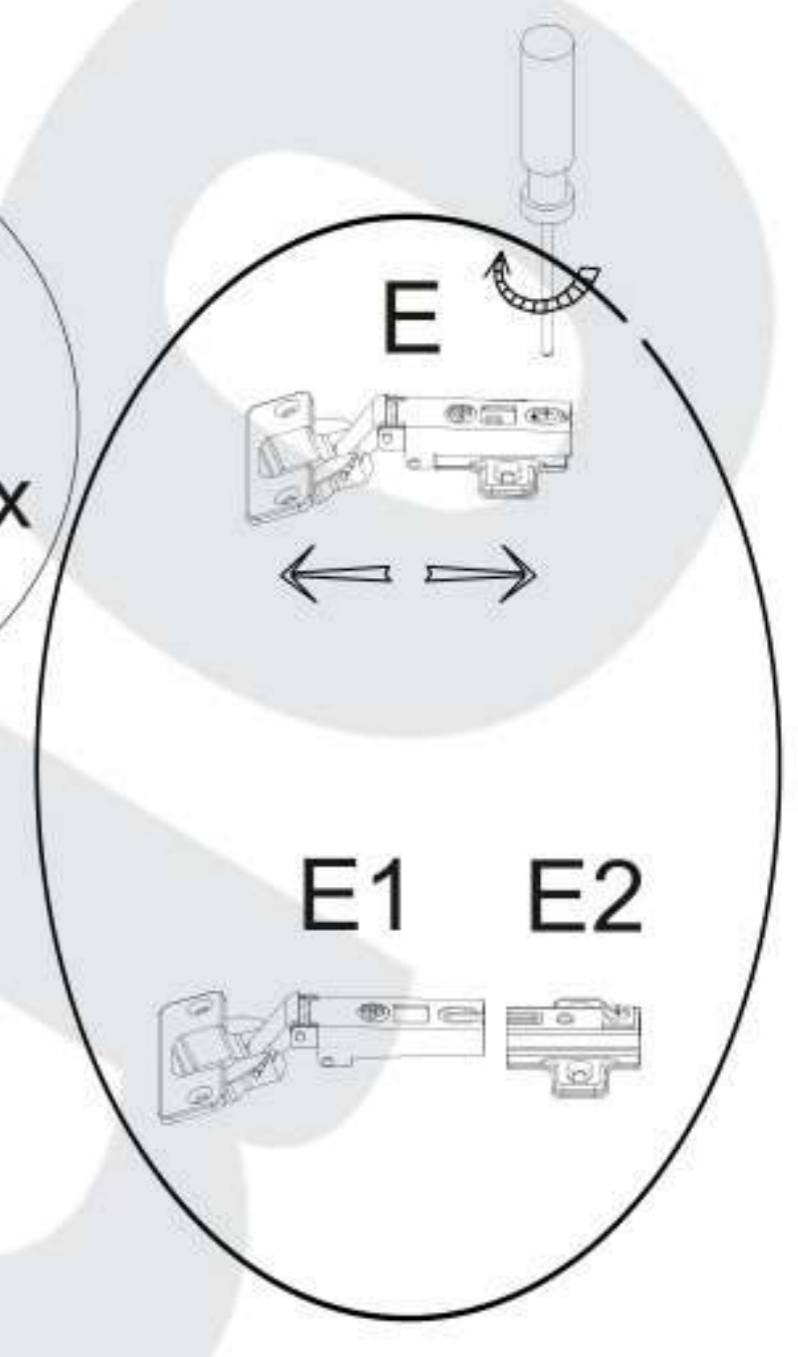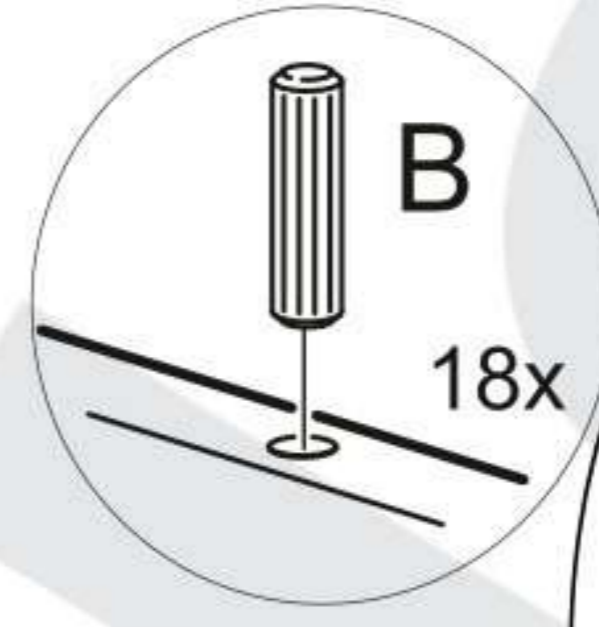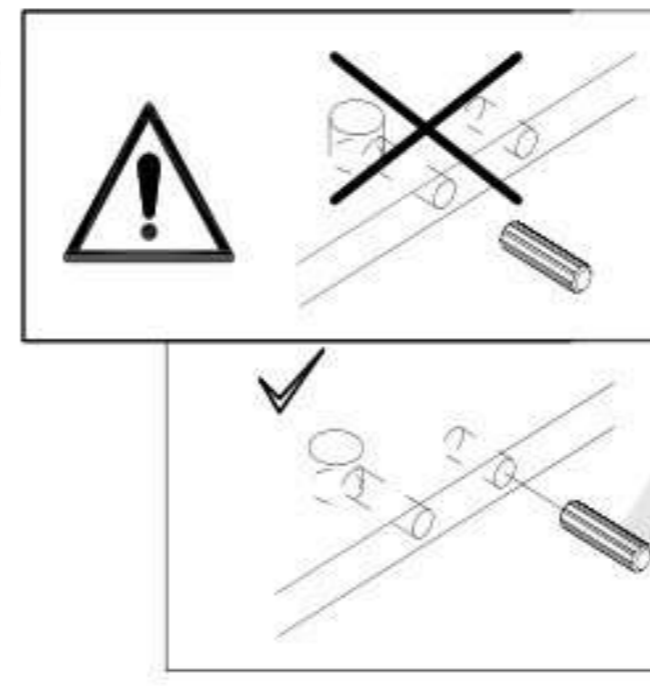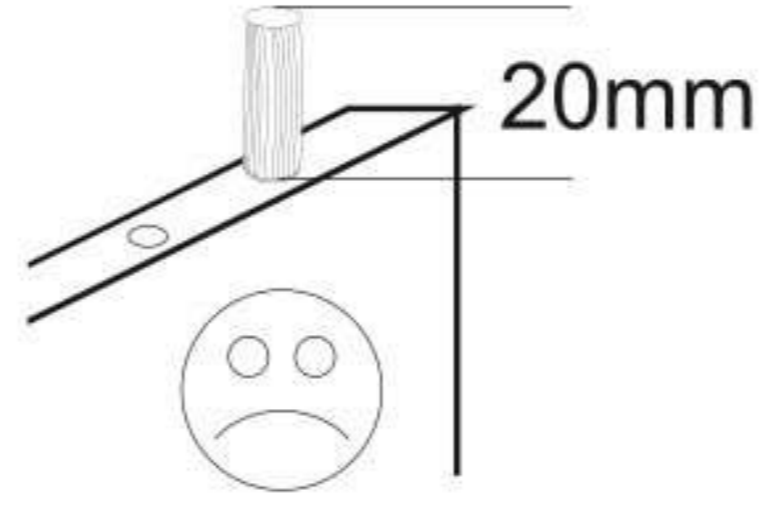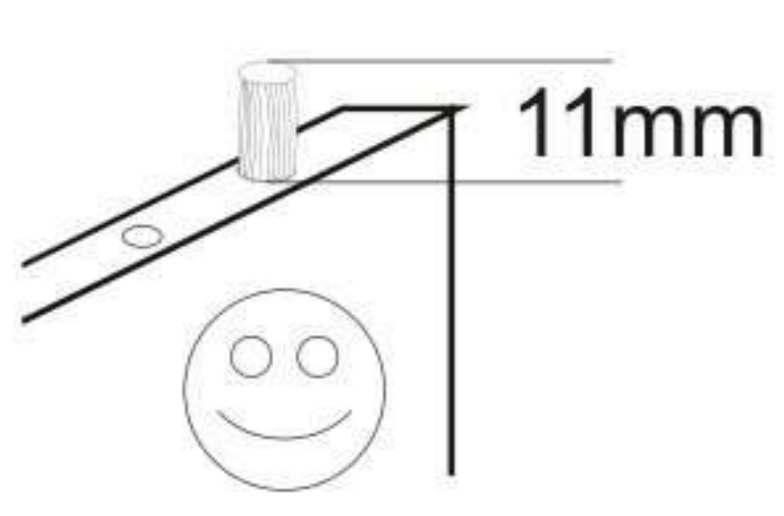           

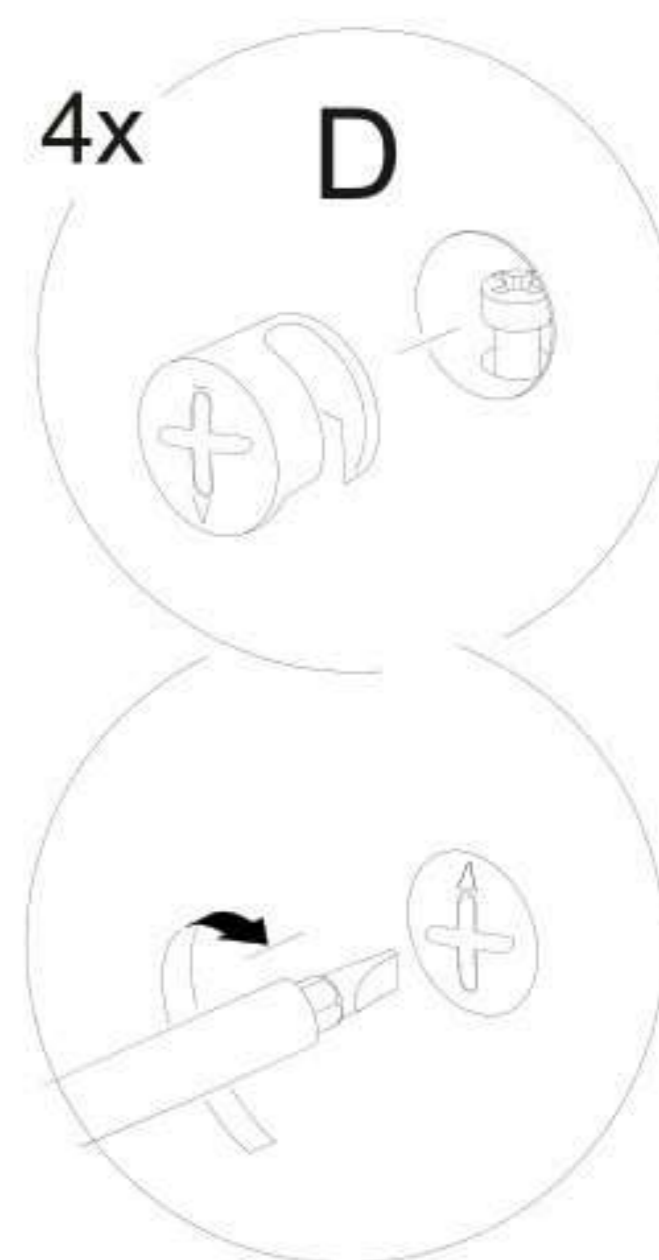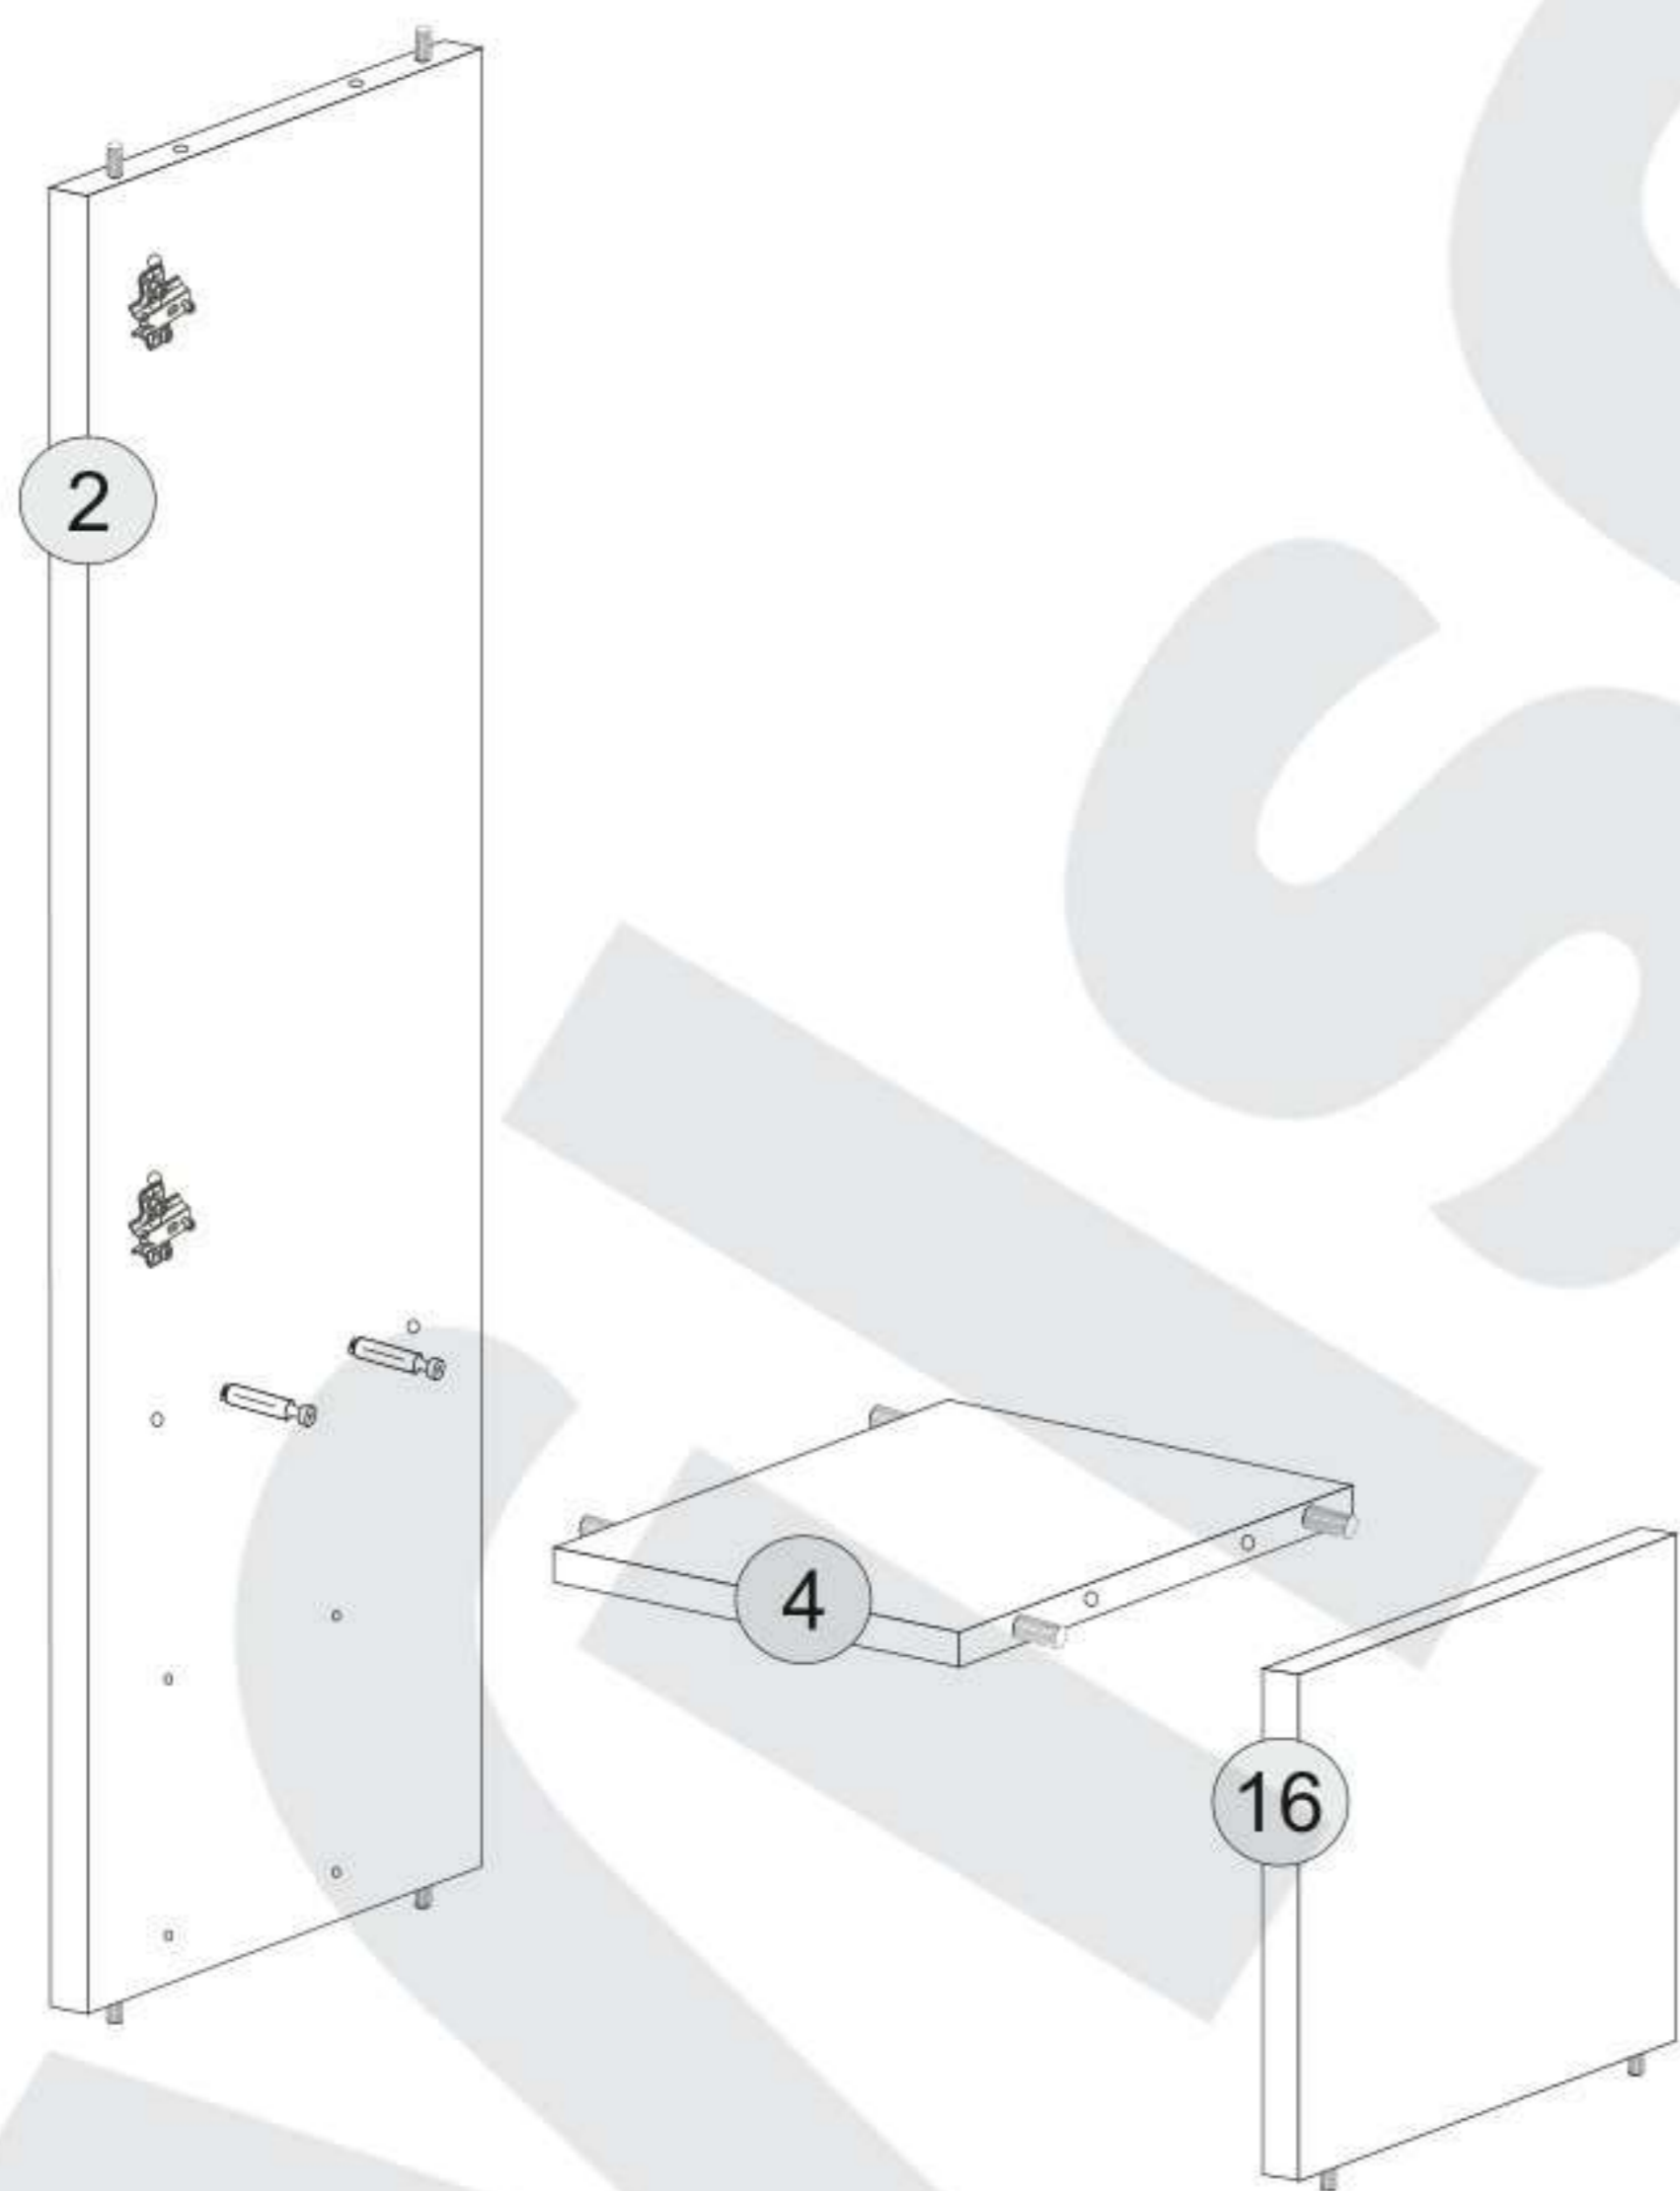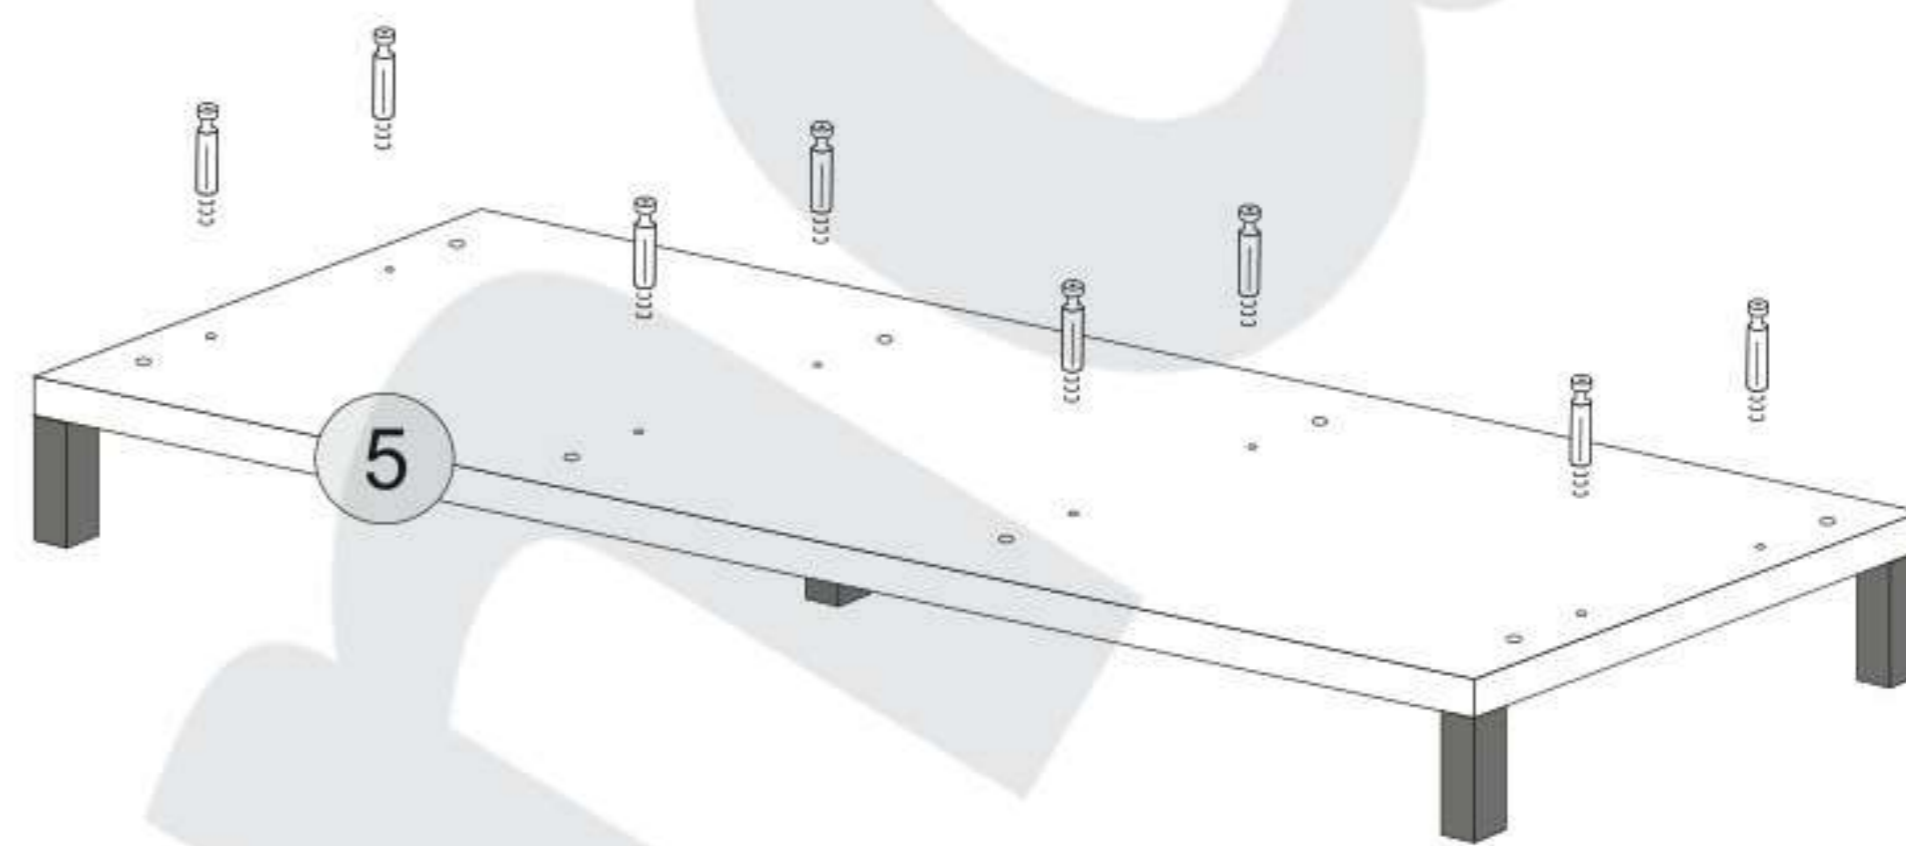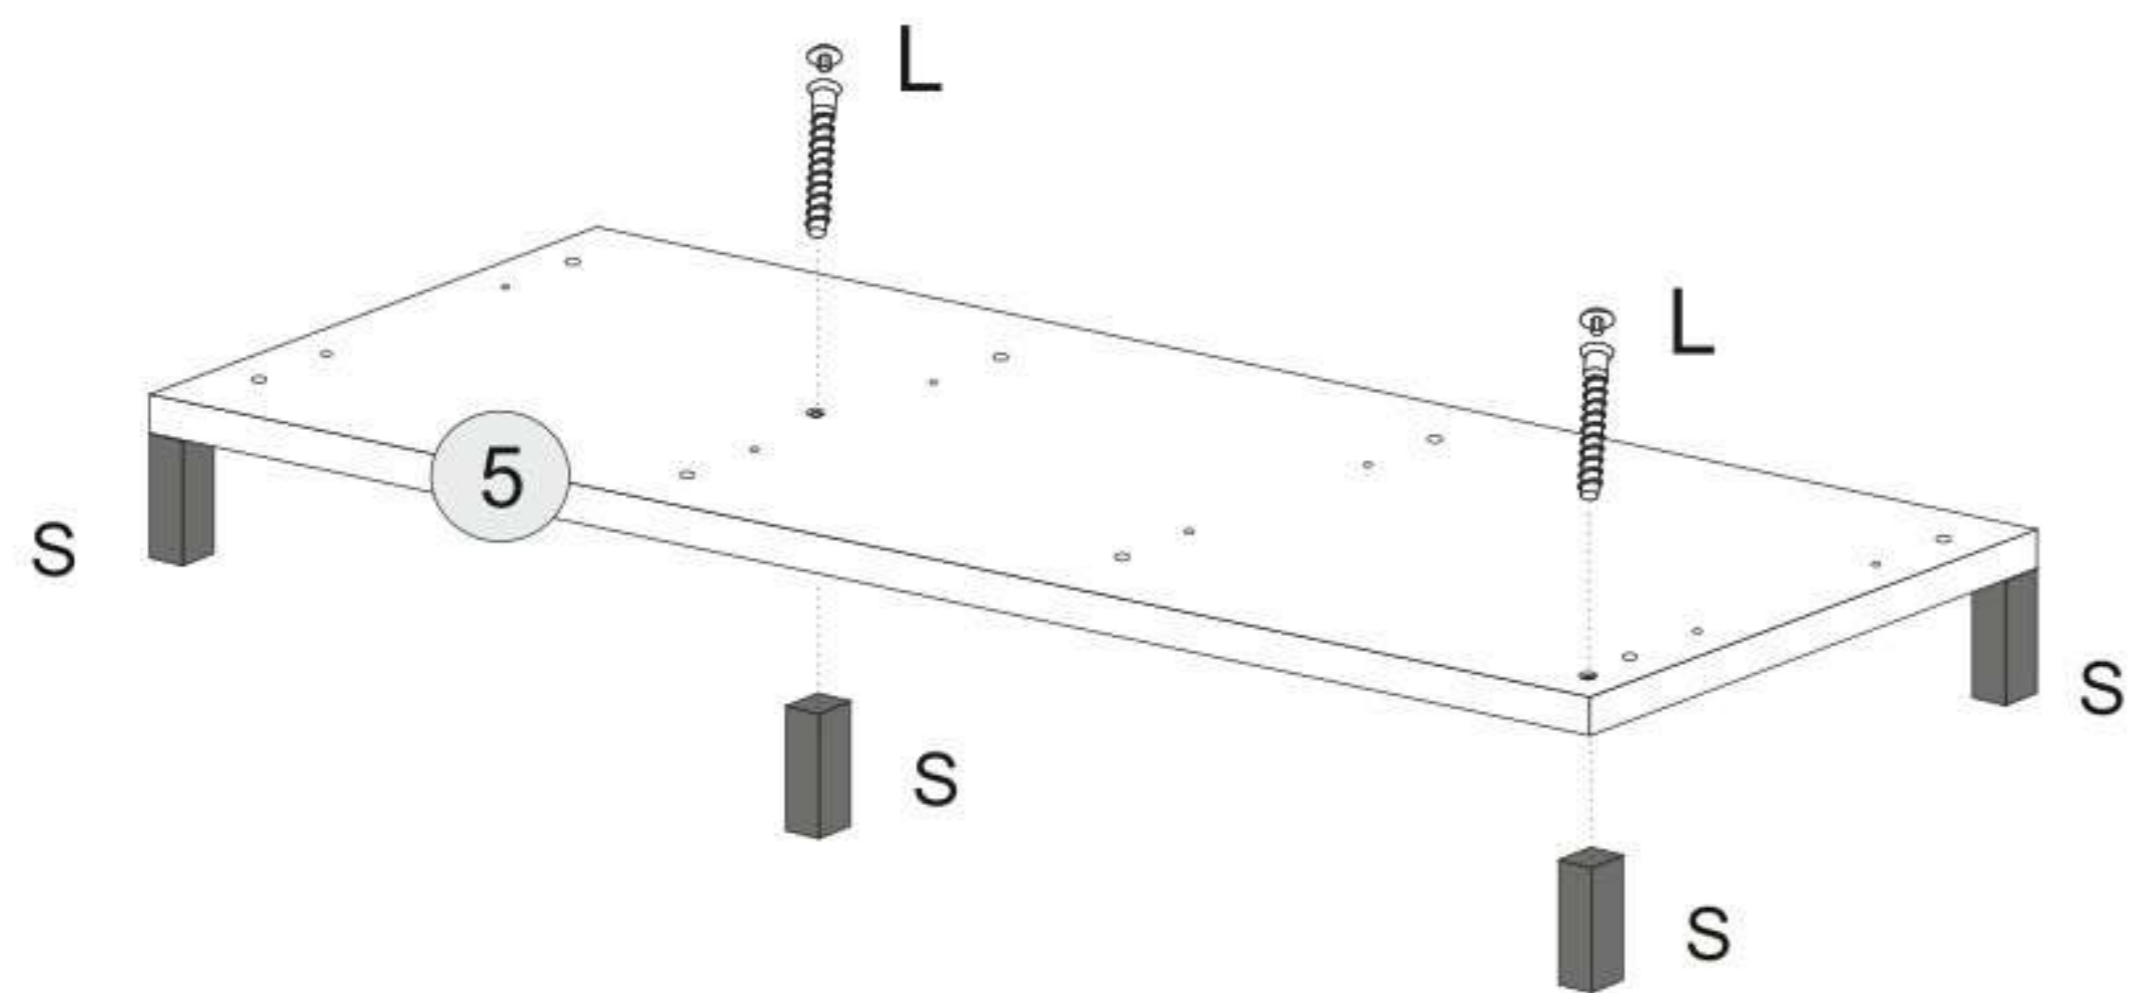    

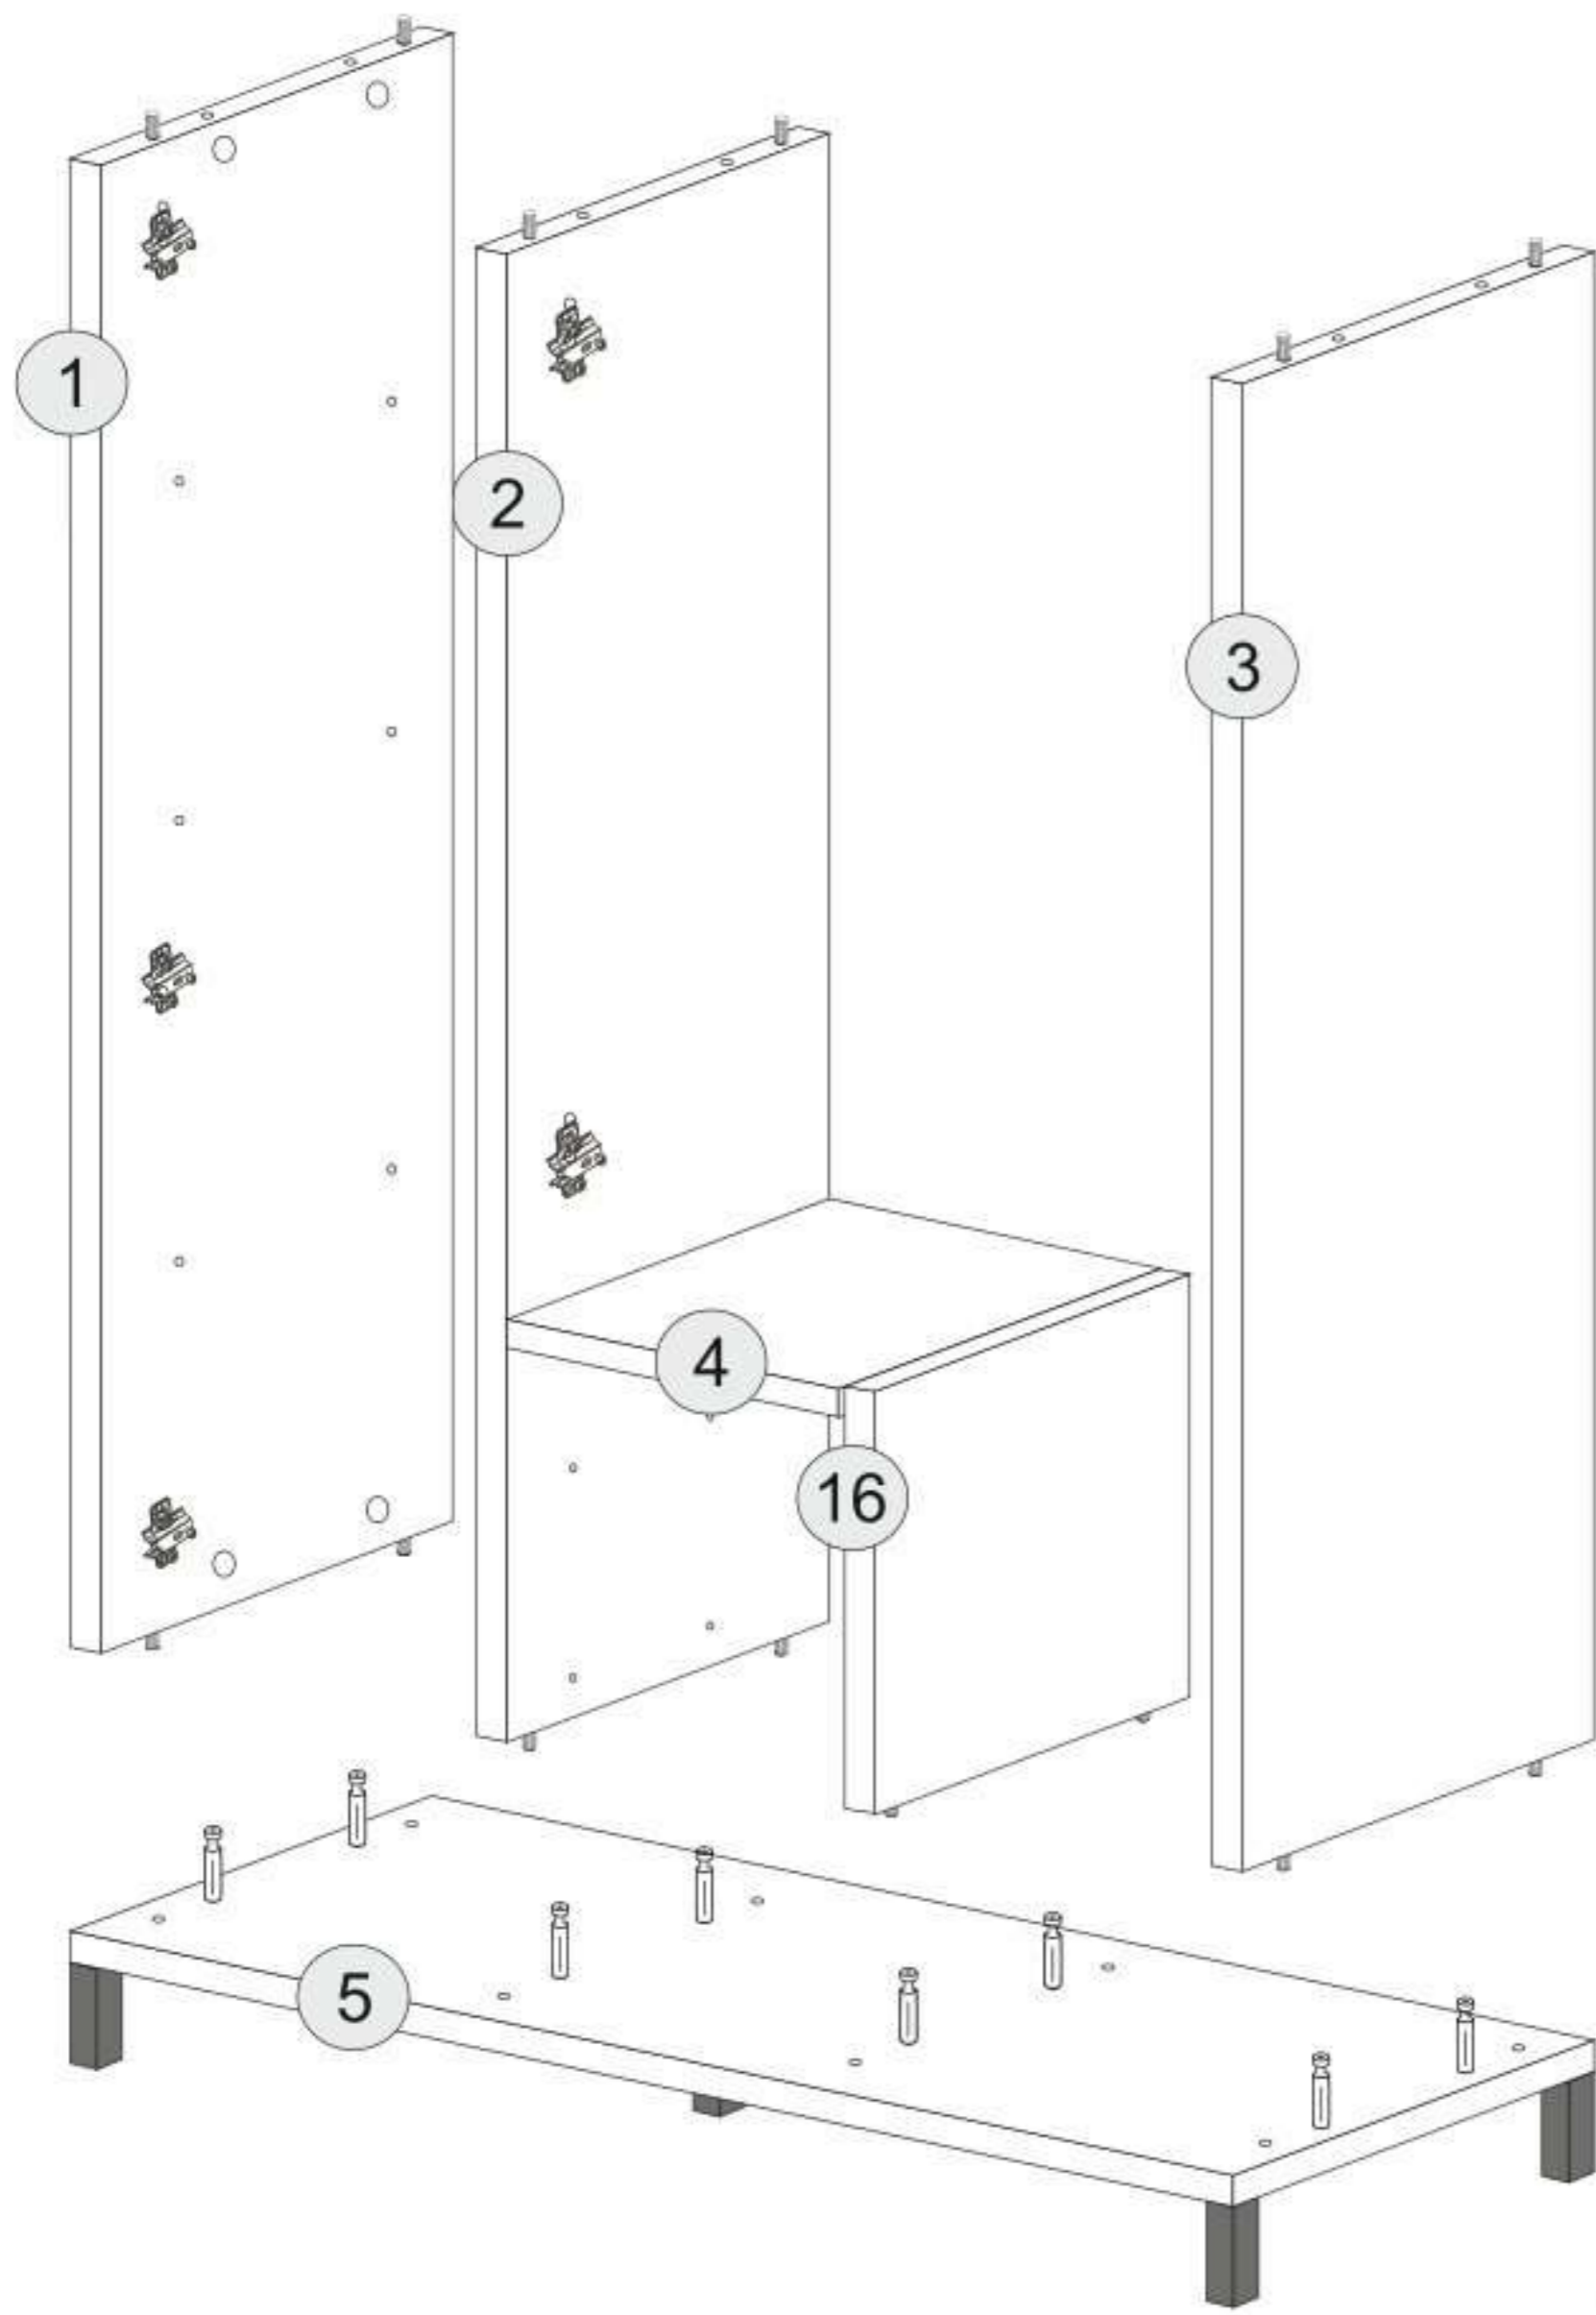 

8x D

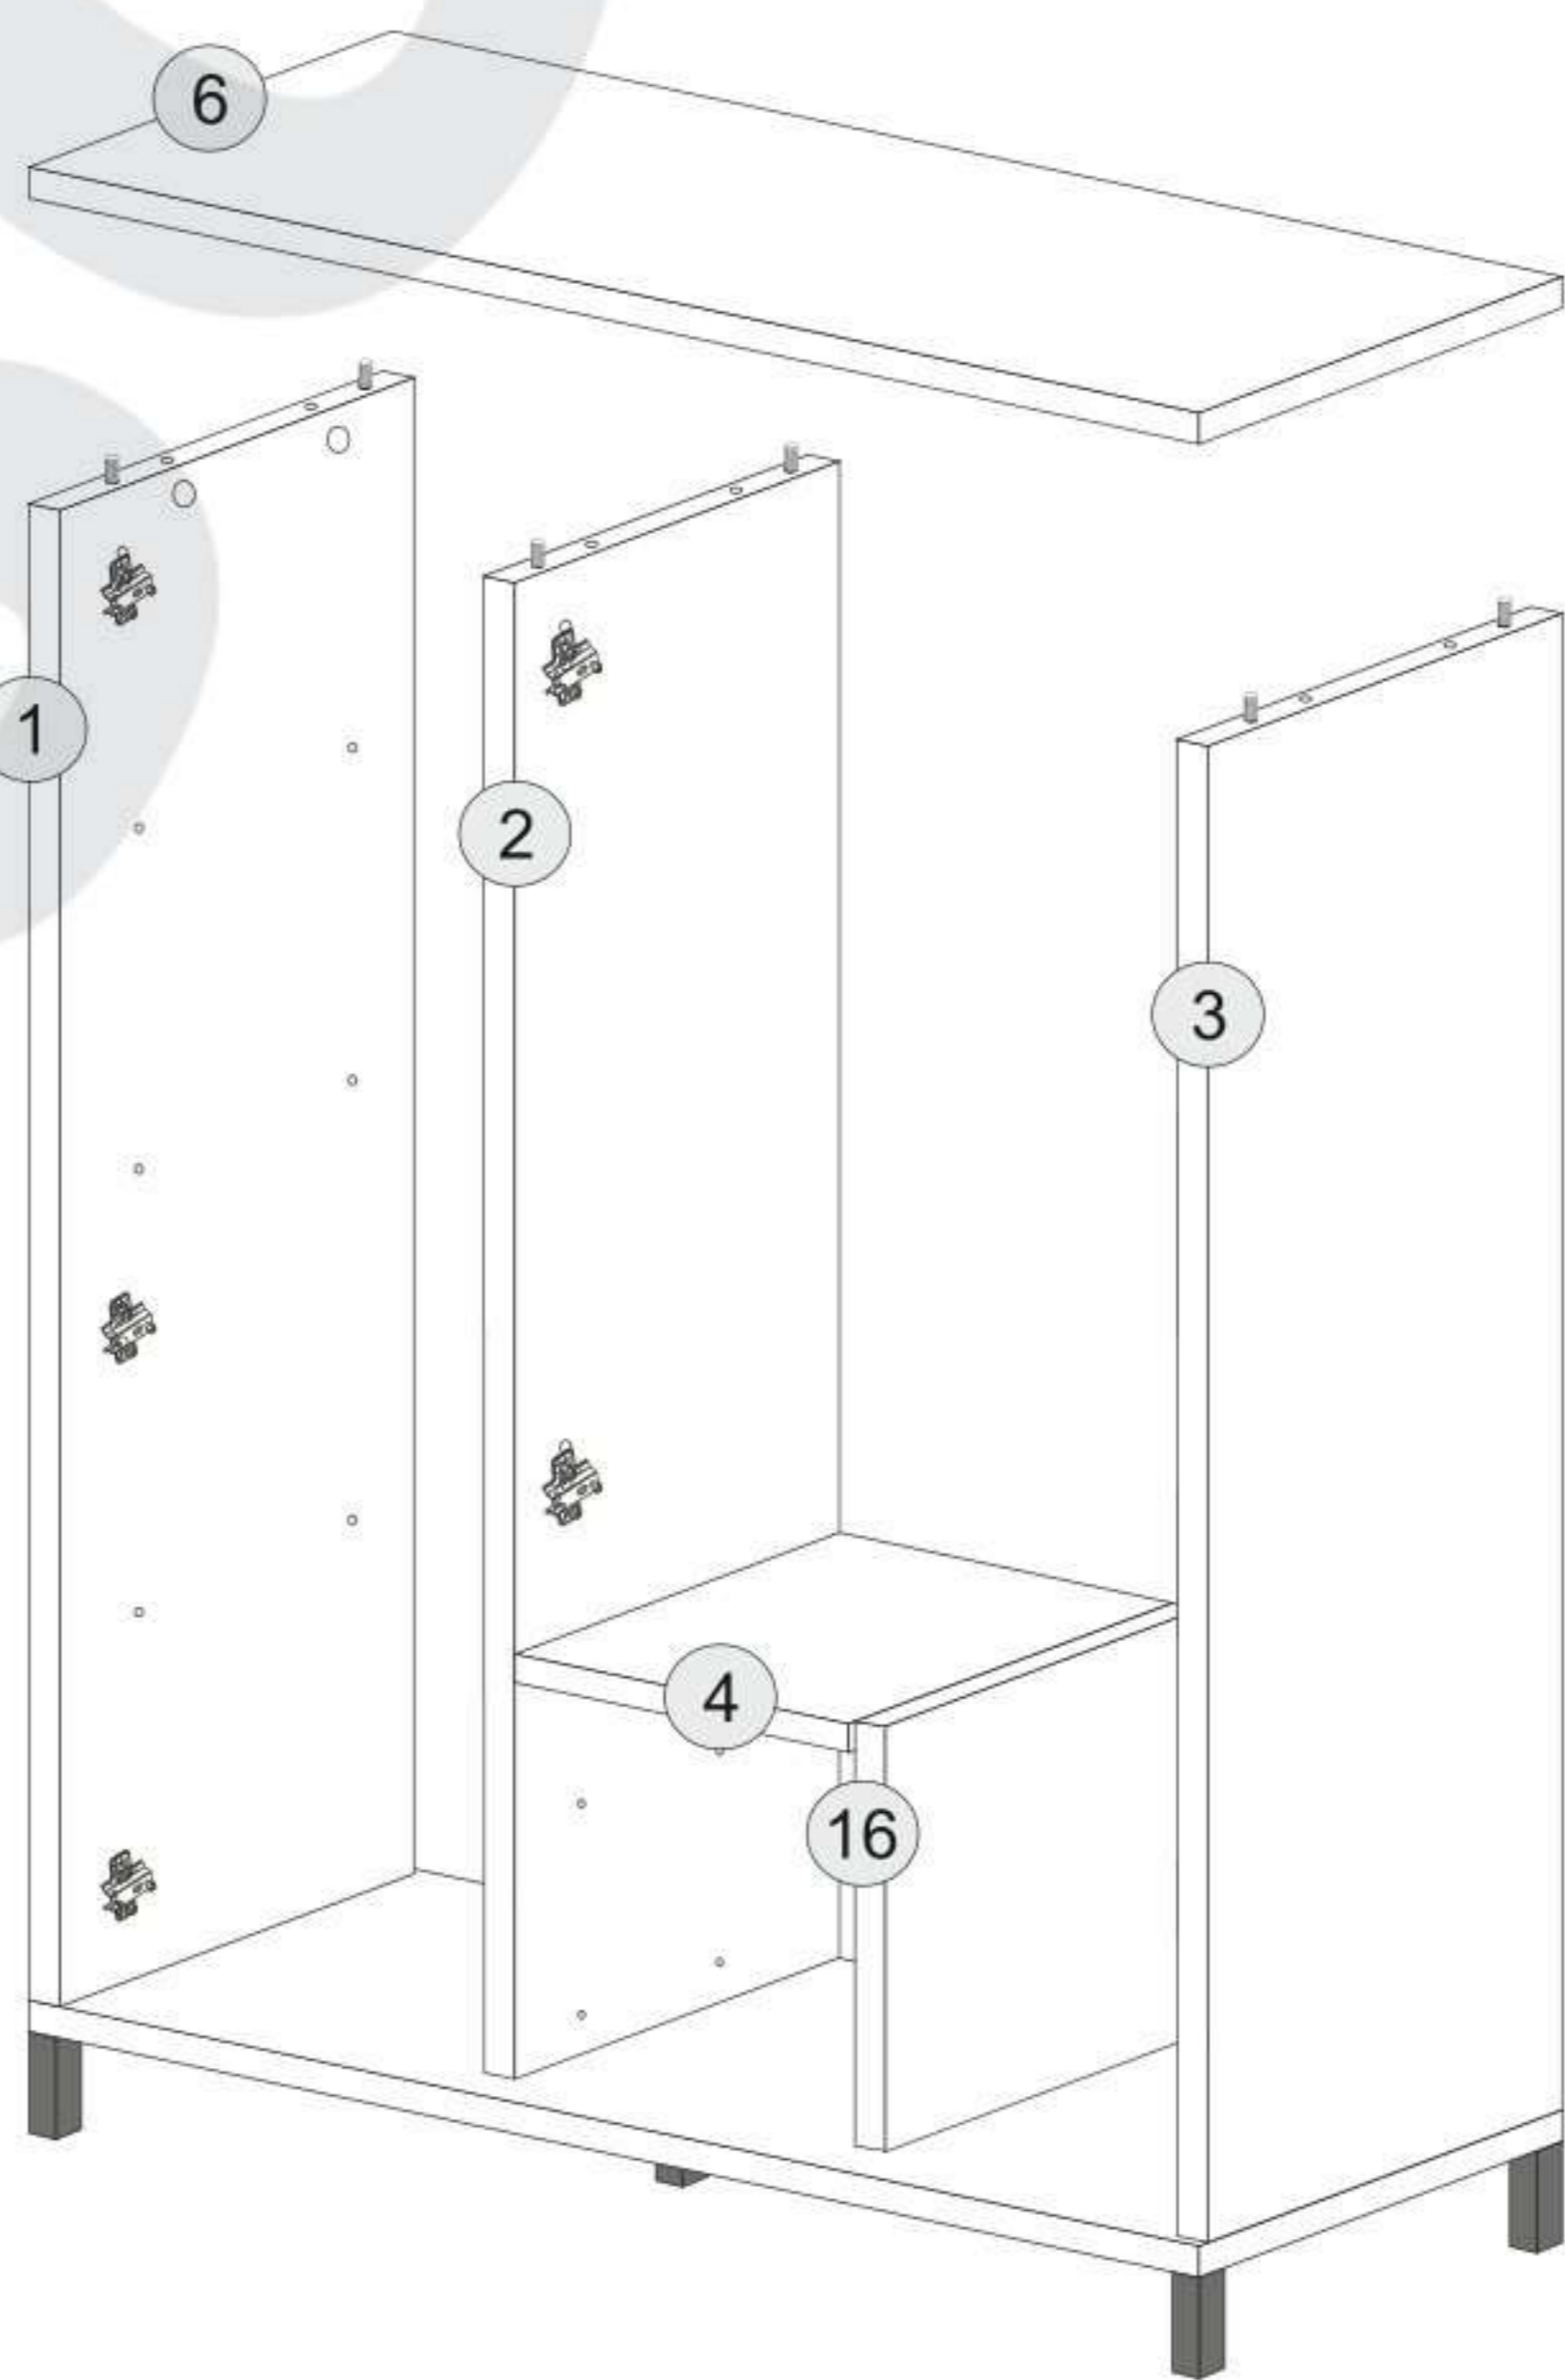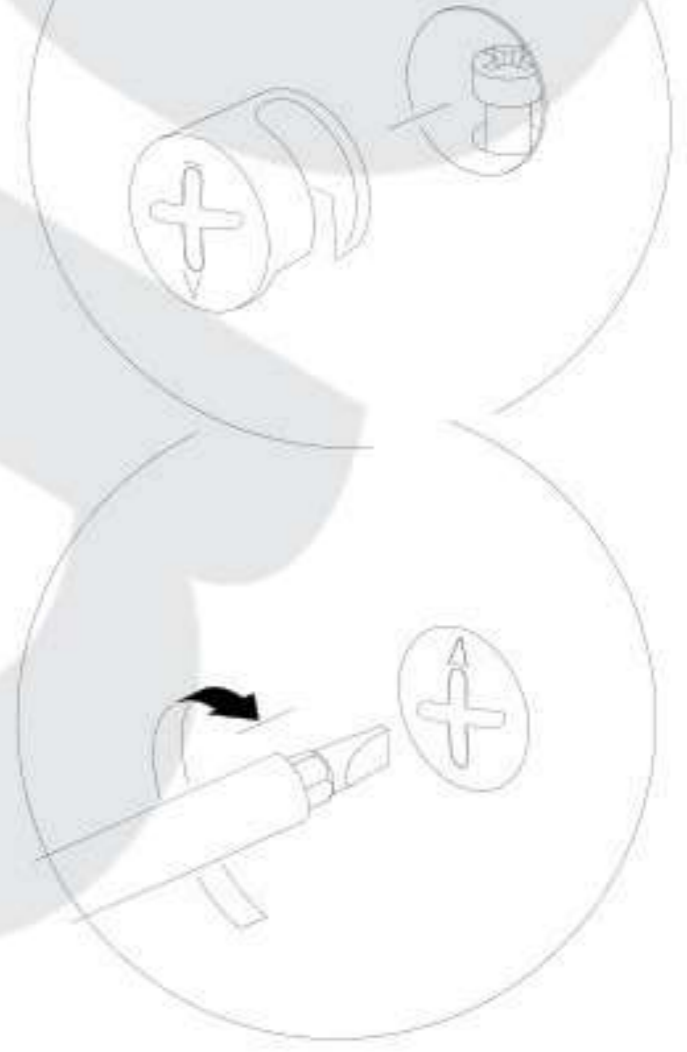  

6x D

