 


PL - SZAFKA SAFARI /
SK - SKRIŇA SAFARI /
HU - SZEKRÉNY SAFARI



(A)  x50	(B)  x6	(C)  x12	(D)  x12	(E)  x1
(F)  x4	(G)  x4	(H)  x12	(I)  x4	(J)  x8
(K)  x12	(L)  x2	(M)  x8	(N)  x12	(O)  x12
(P)  x6	(Q)  x1			

