

# LUNA LN-10



PL - Przed rozpoczęciem zapoznać się z instrukcją montażu.

DE - Vor die montage, bitte beiliegende anweisungen folgen.

EN - Before starting, refer to the assembling advice in annex.

CZ - Před zahájením naleznete v montážním návodu.

SK - Pred začatím nájdete v montážnom návode.

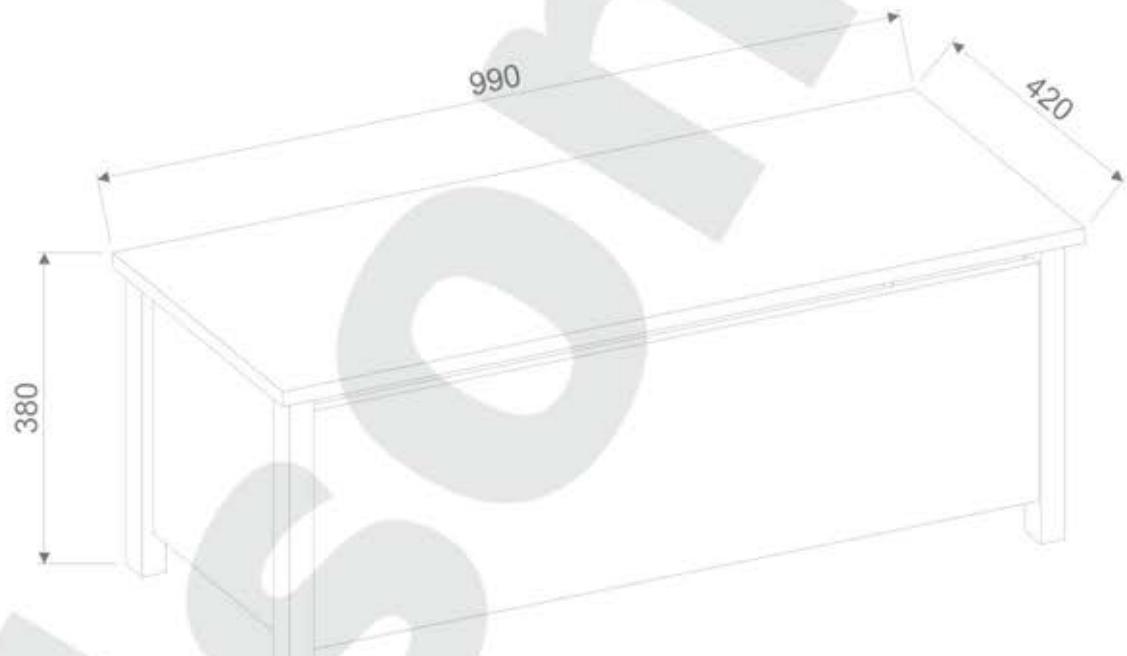
RU - Перед началом обратитесь к инструкции по установке.

SR - Пре почетка погледајте упутства за инсталацију.

HR - Prije početka pogledajte upute za instalaciju.



HU - Az összeszerelési munkálatok megkezdése előtt kérjük.

ismerkedjen meg az útmutató tartalmával.




Potrzebne narzędzia/ Benötigtes Werkzeug/ Required tools/ Potřebné nastroje/






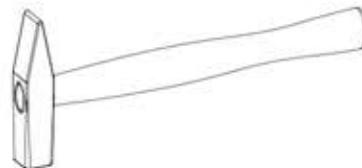
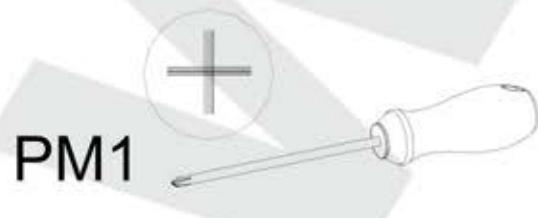
Potrebné nastroje/ Необходимые инструменты/ Potreban alat/ Szereléshez szükséges szerszámok



15 PL - Wymiary elementów  
 EN - The dimensions of the elements  
 14 DE - Abmessungen der Elemente  
 CZ - Rozměry prvků  
 SK - Rozmery prvkov  
 RU - Размеры элементов  
 12 SRB - димензије елемената  
 HR - dimenziјe elemenata  
 11 HU - A bútorelemek méretei

01.01	311.0	324.0	1	1/1
01.02	311.0	324.0	1	1/1
03.11	897.0	367.0	1	1/1
07.71	361.0	40.0	2	1/1
07.72	361.0	40.0	2	1/1
08.11	989.0	420.0	1	1/1
13.11	897.0	288.0	1	1/1
13.12	897.0	311.0	1	1/1

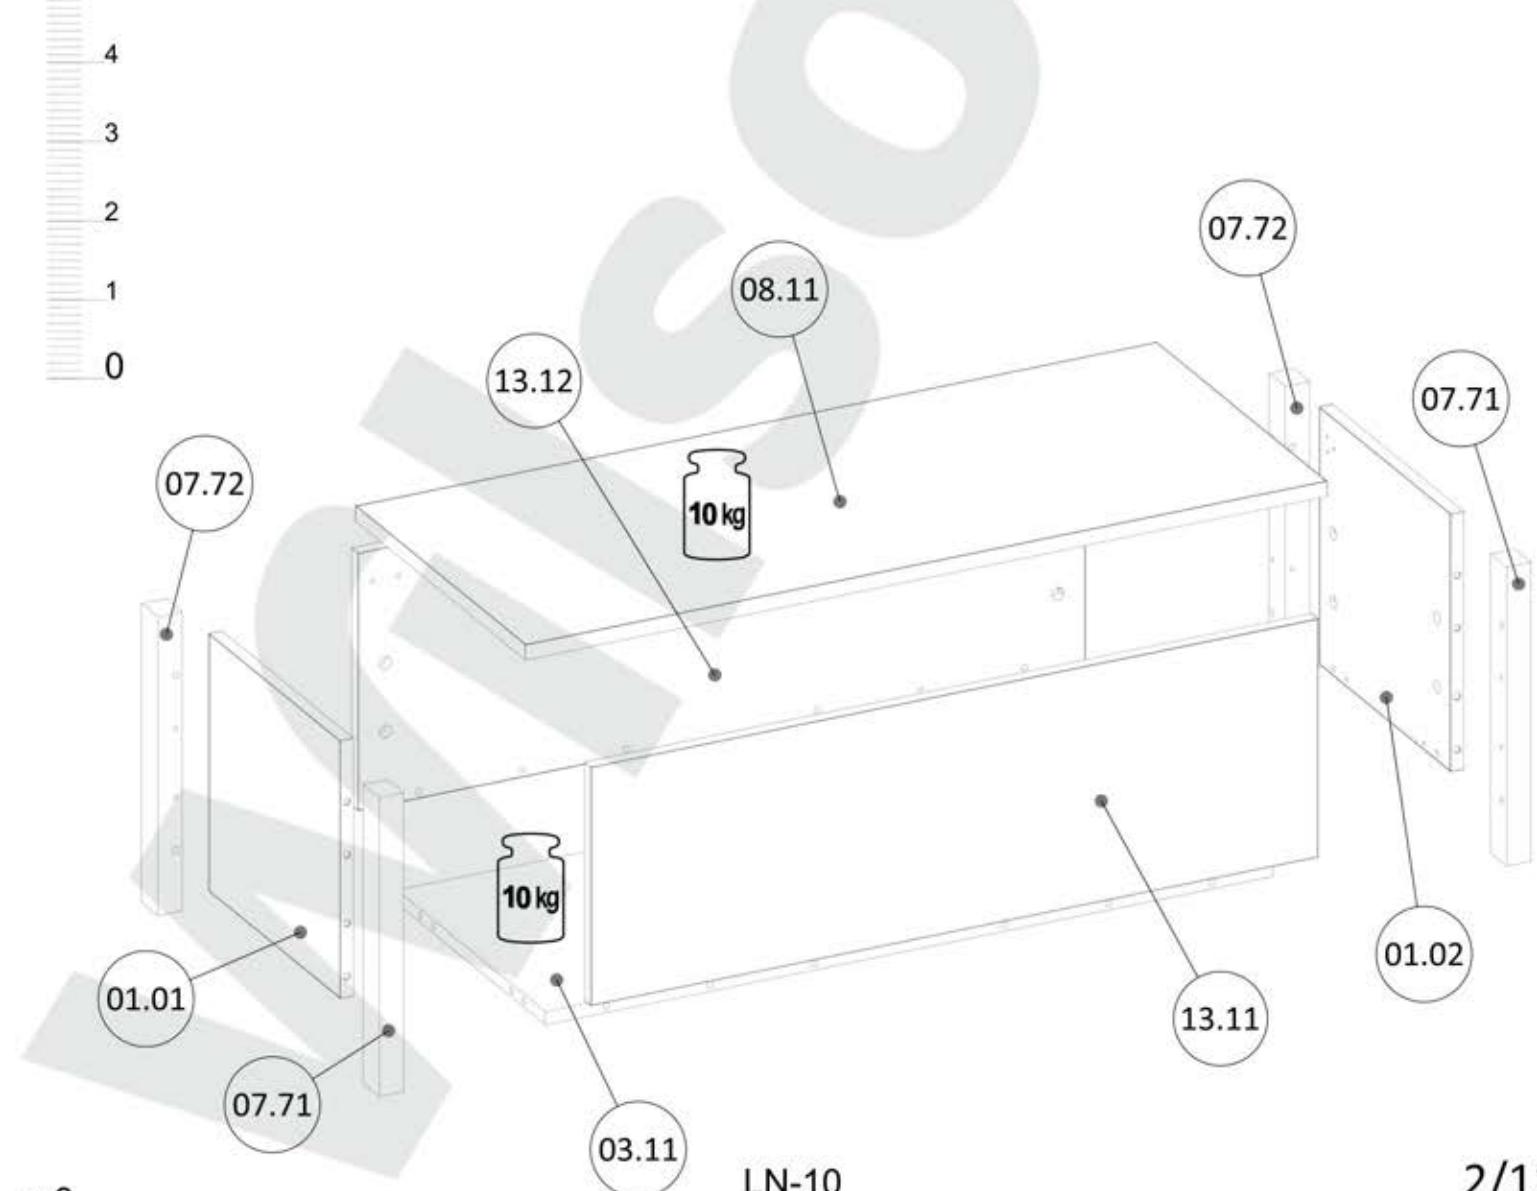

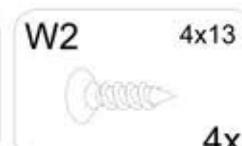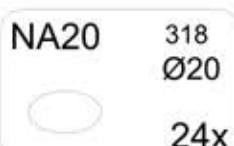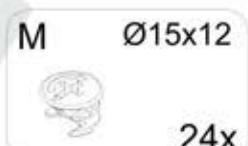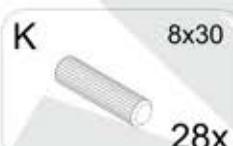
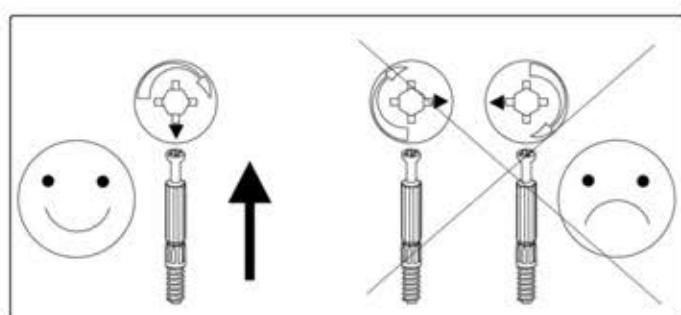
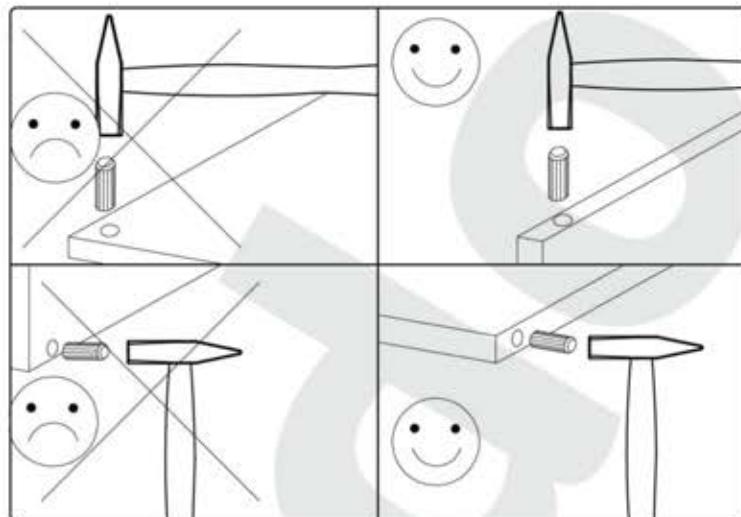
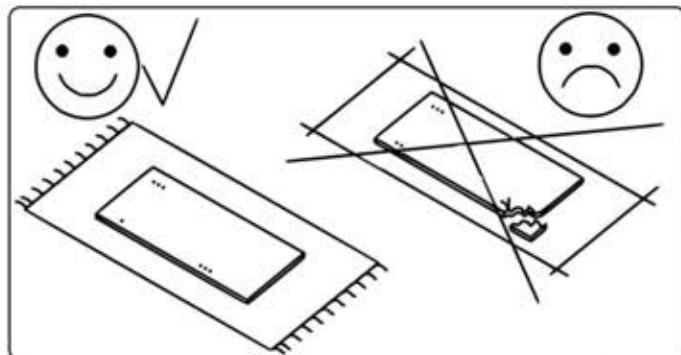


Proszę sprawdzić kompletność okuc przed montażem  
Bitte überprüfen Sie die Vollständigkeit der Fittings vor der Montage  
Please check the completeness of the fittings before assembly  
Пожалуйста, проверьте комплектность фурнитуры перед установкой






Prosím zkontrolujte úplnost konektorů před instalací  
Prosím skontrolujte úplnosť konektorov pred inštaláciou  
Prije montaže provjerite cjelovitost okova  
Pre postavljanja proverite kompletност okova


**1**

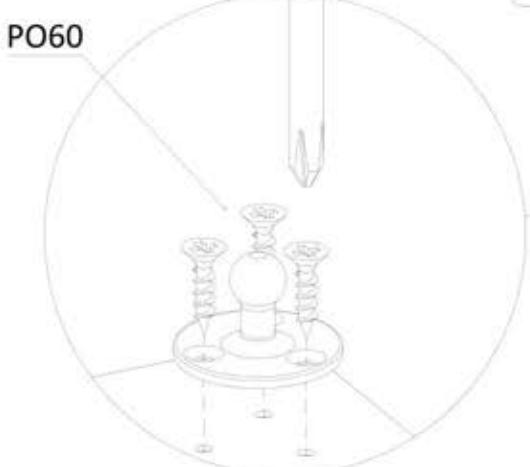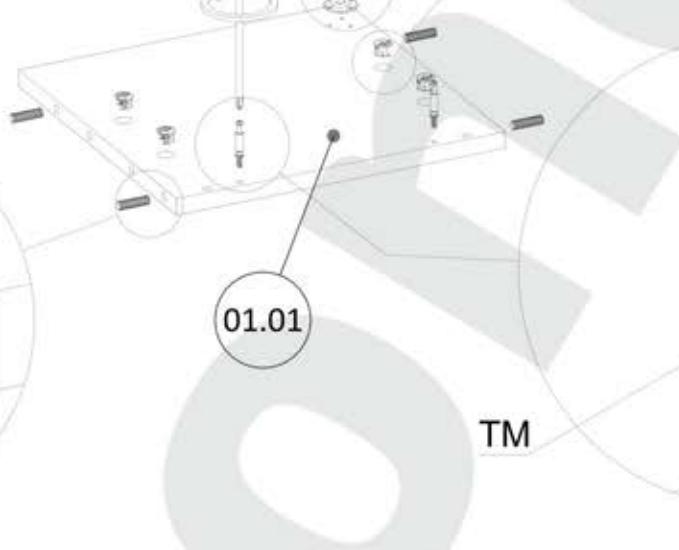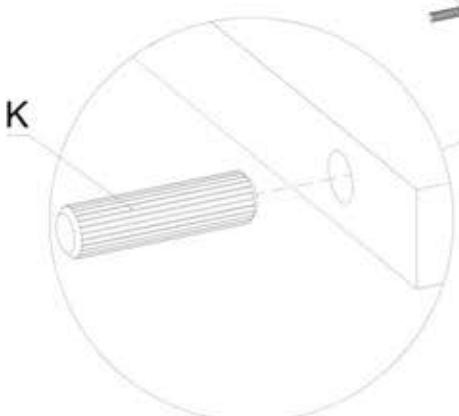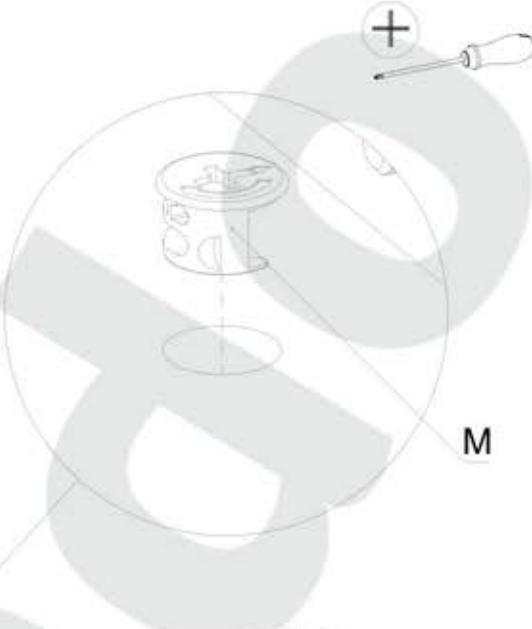PO60



60N  
3x  
1x  
1x**2**

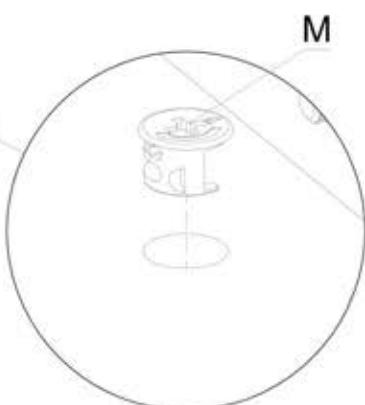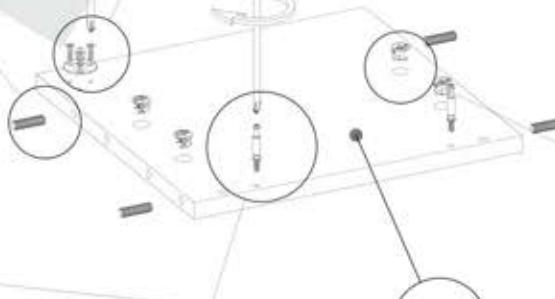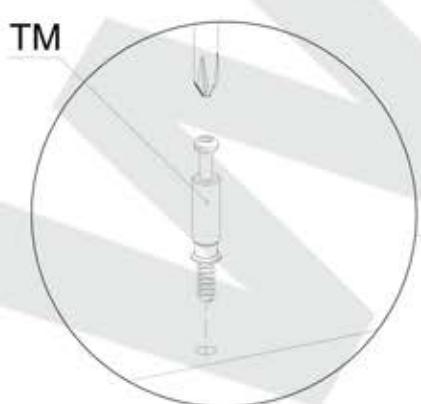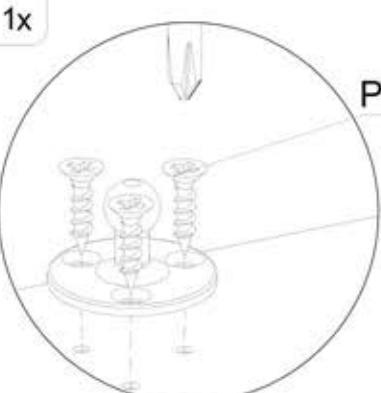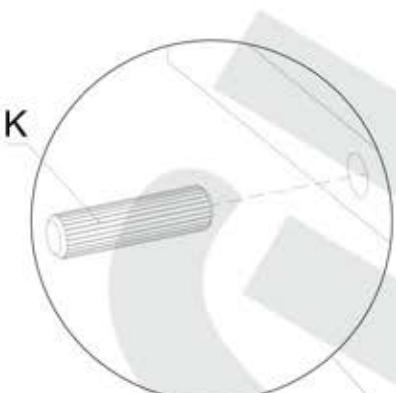PO60


60N  
3x  
1x  
1x

**3**

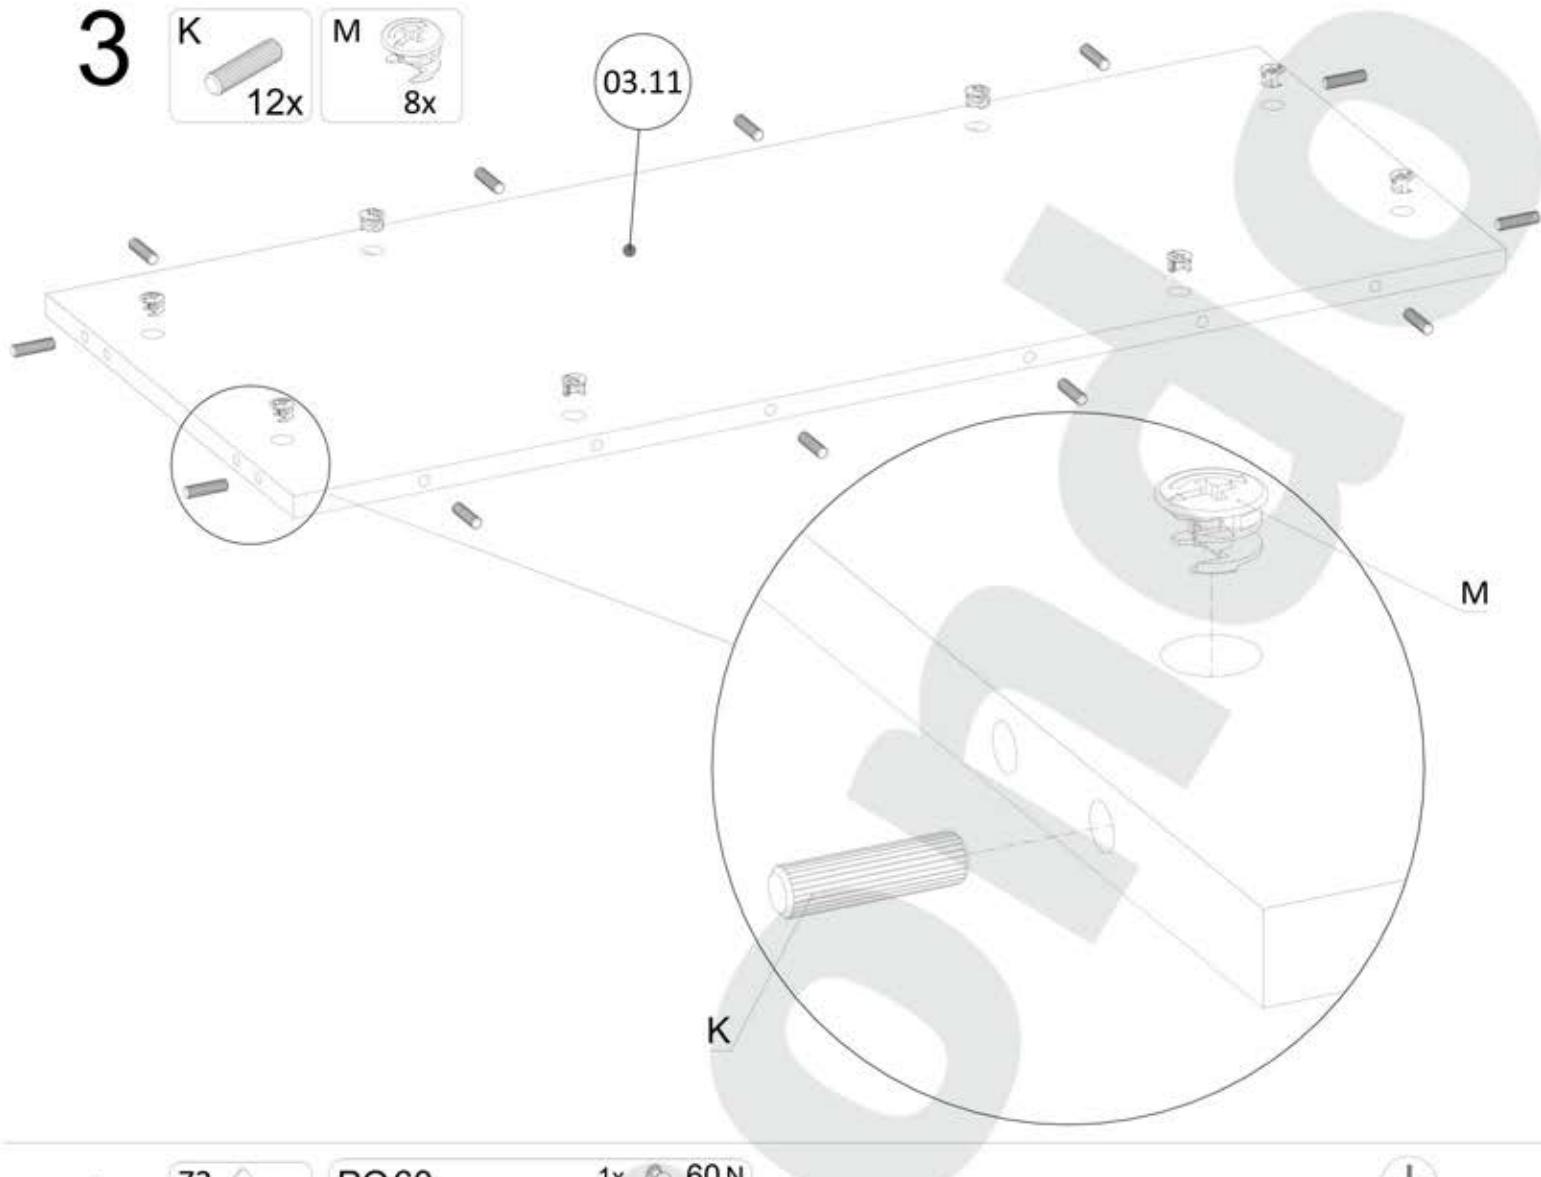03.11

**4**



PO60



Z2

W2

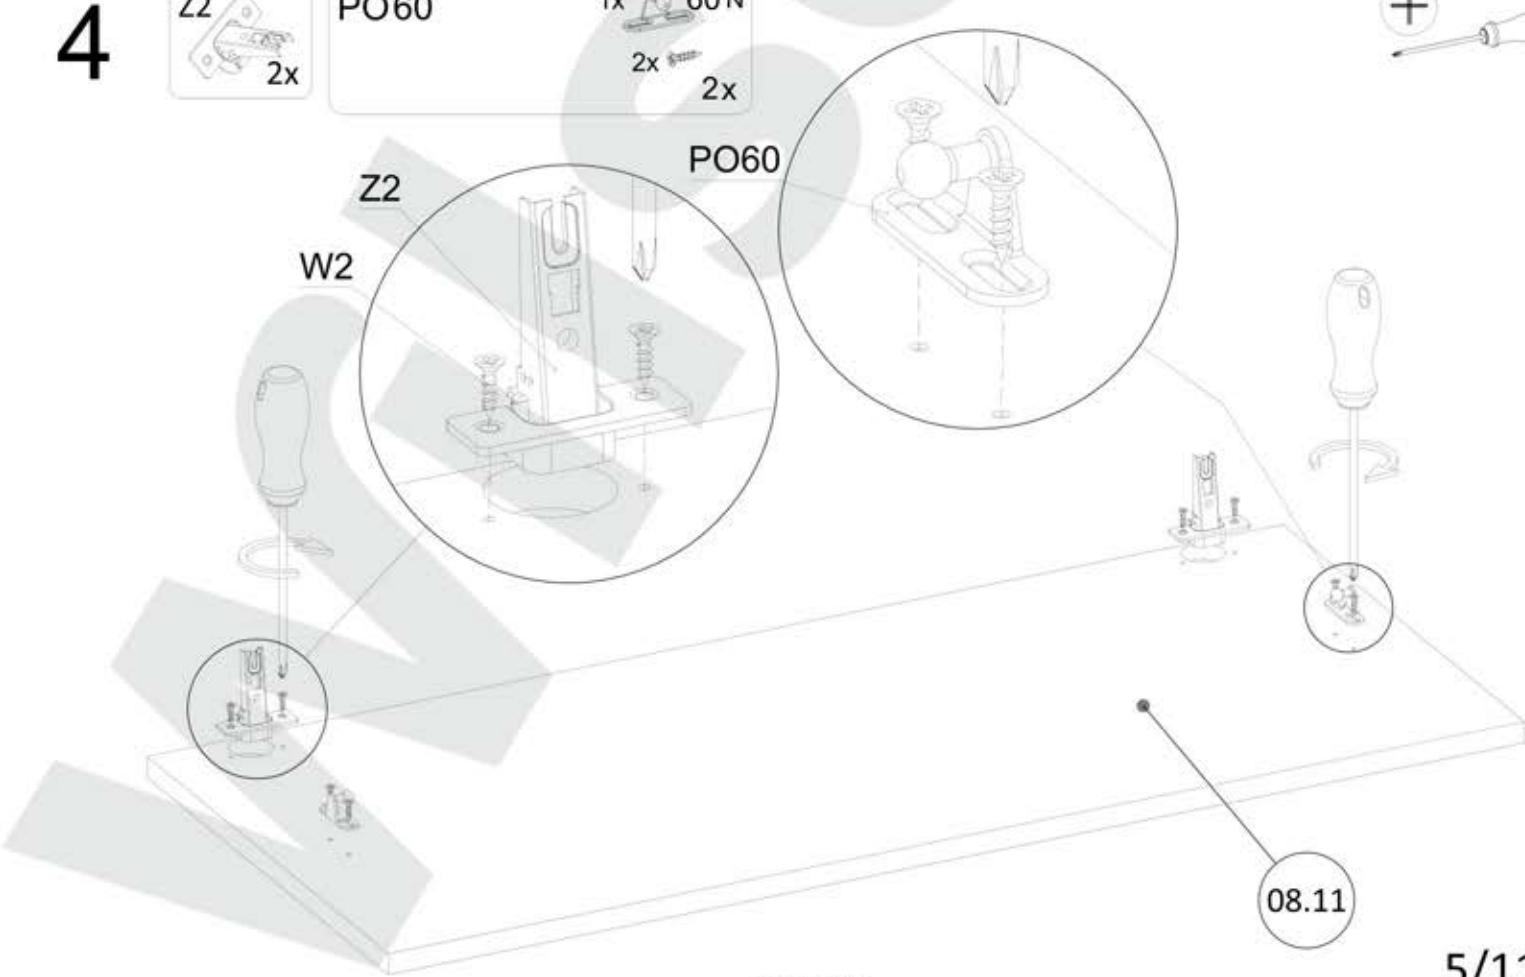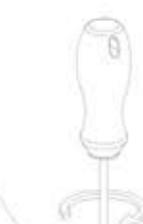PO60



LN-10




5/11

**5**

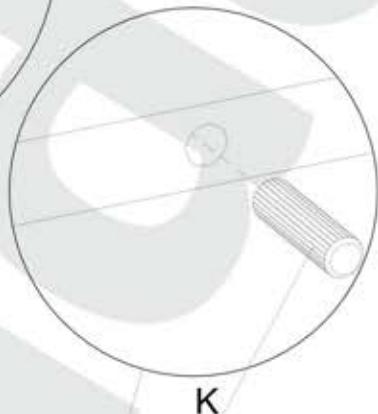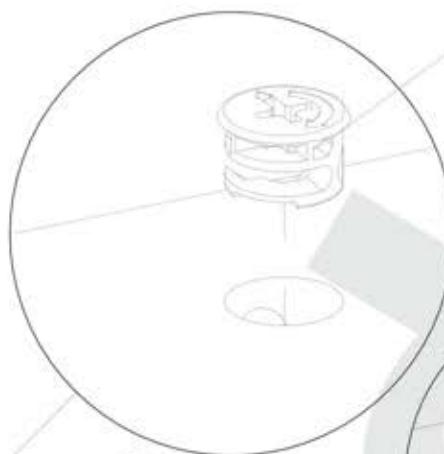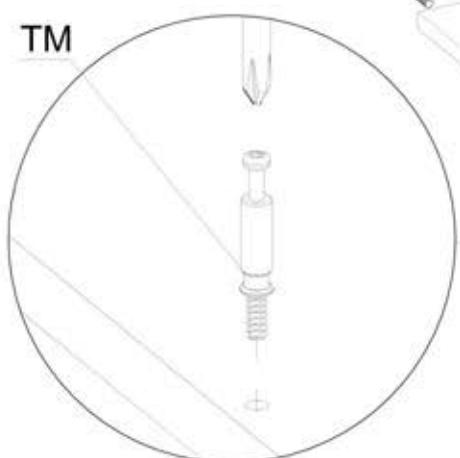TM

M

+



13.11



**6**

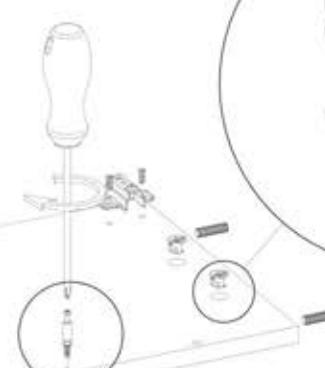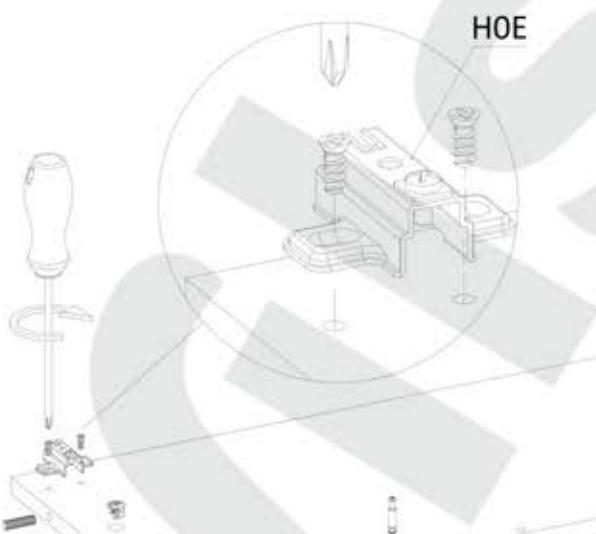+

M


HOE

13.12






TM

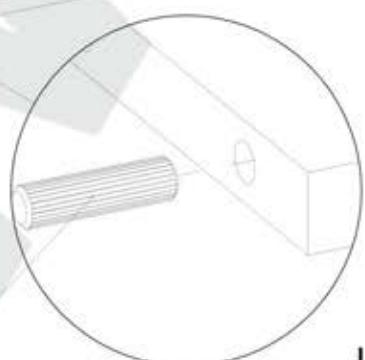K




LN-10

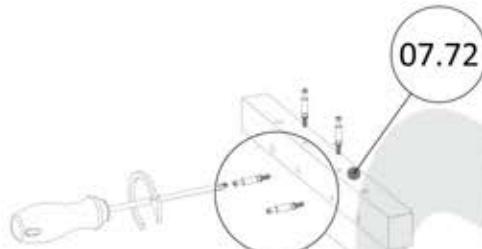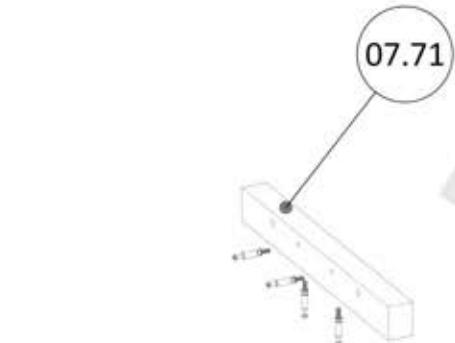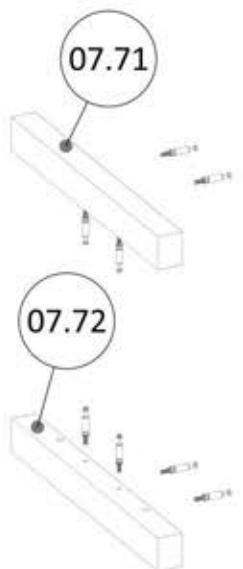6/11

**7**

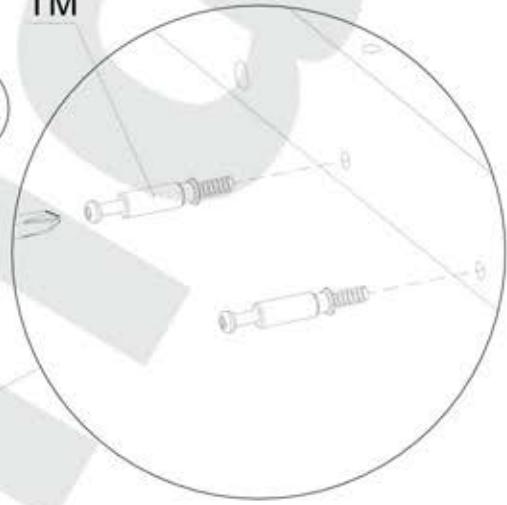TM


**8**

NA20


4x

SG

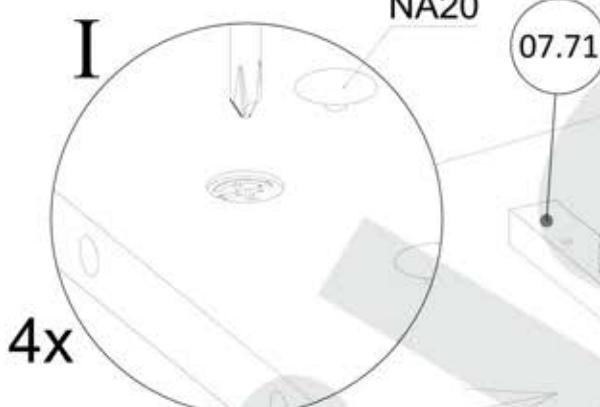
2x




4x

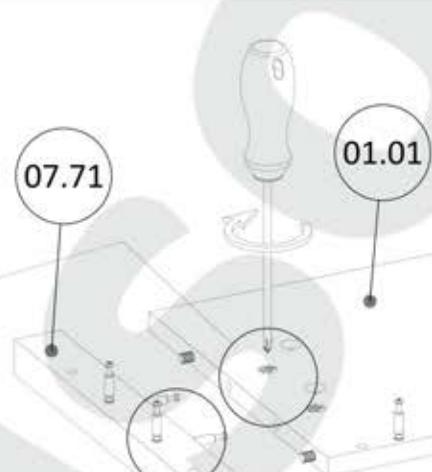

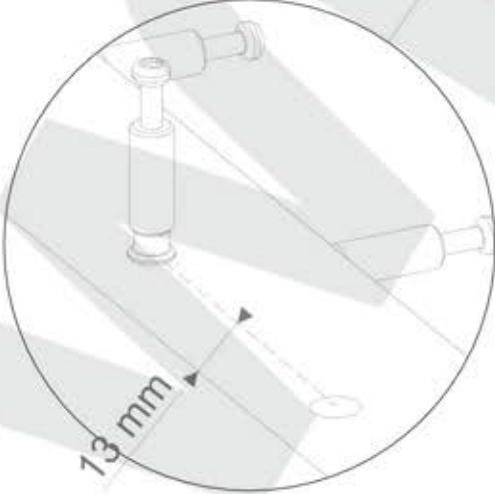07.72







II

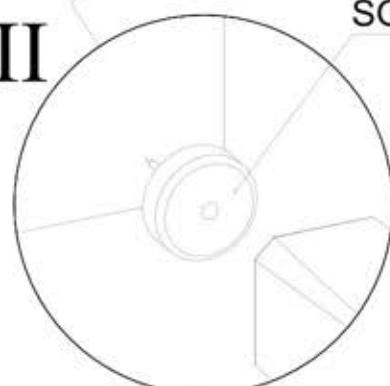

LN-10

8 mm

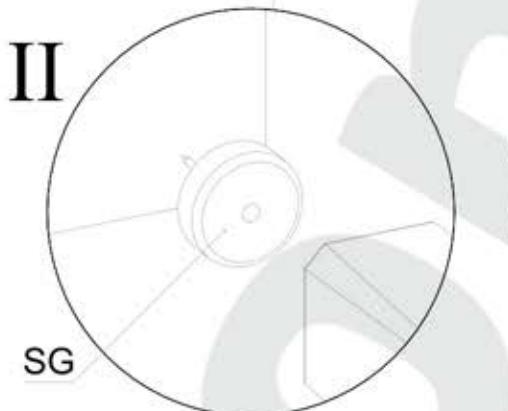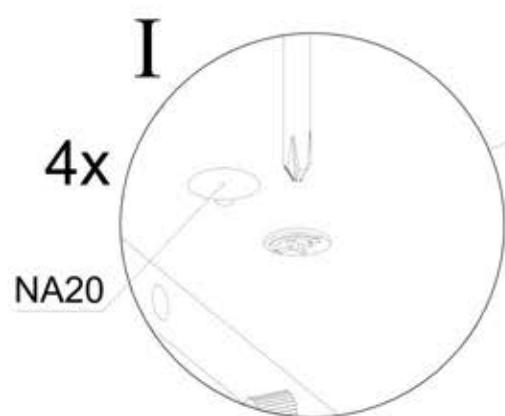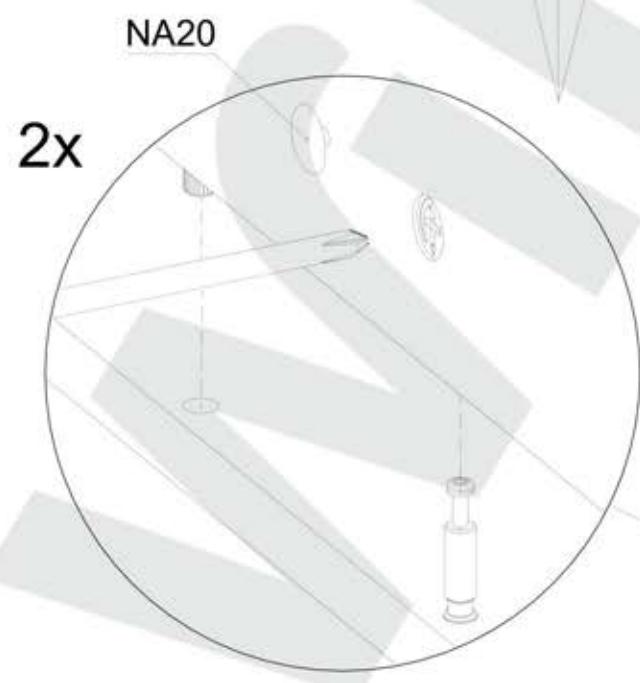7/11

**9****10**

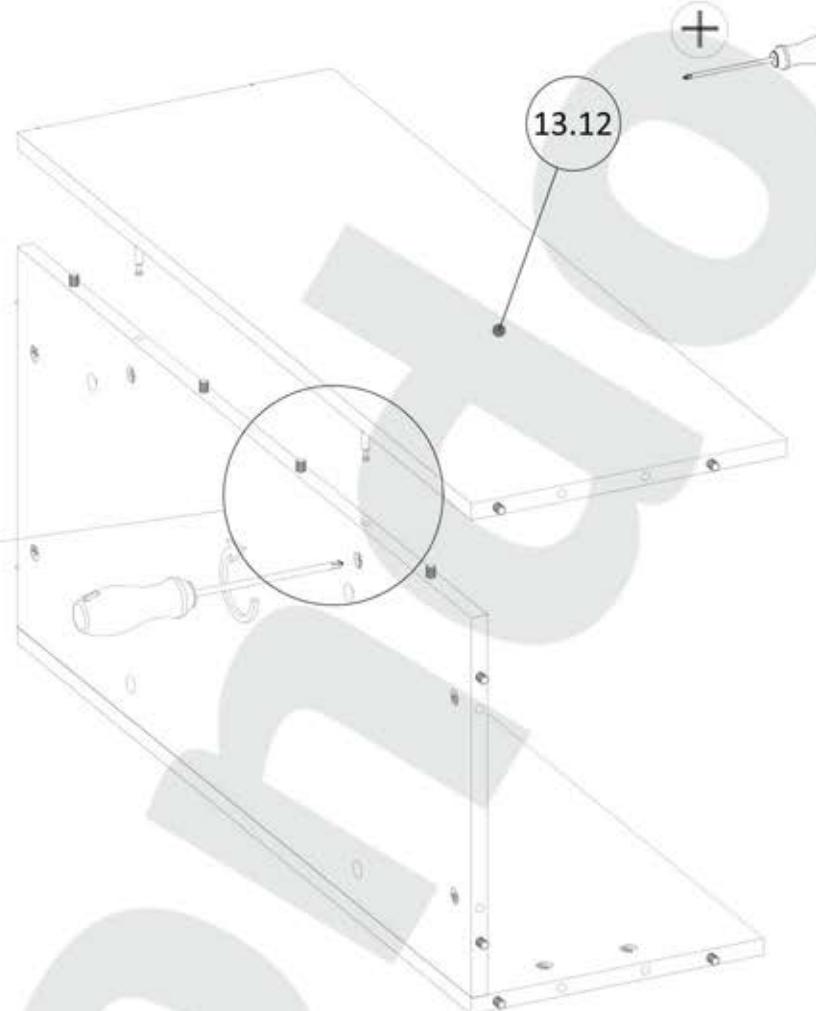
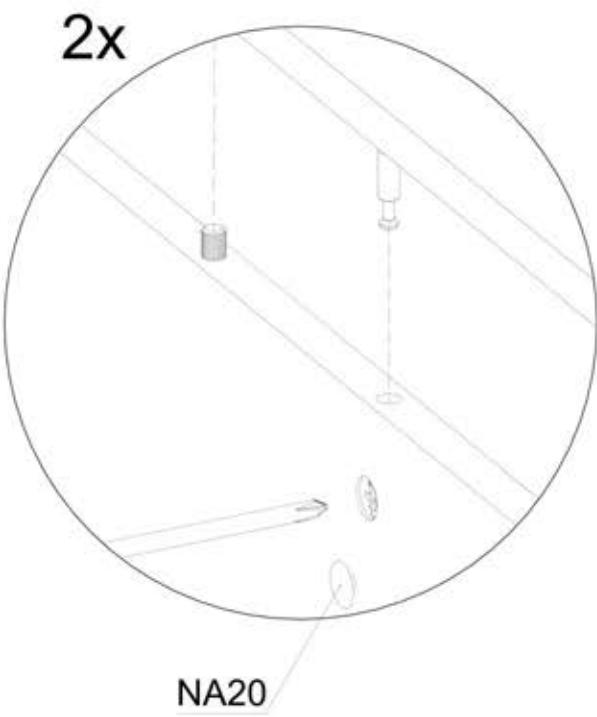
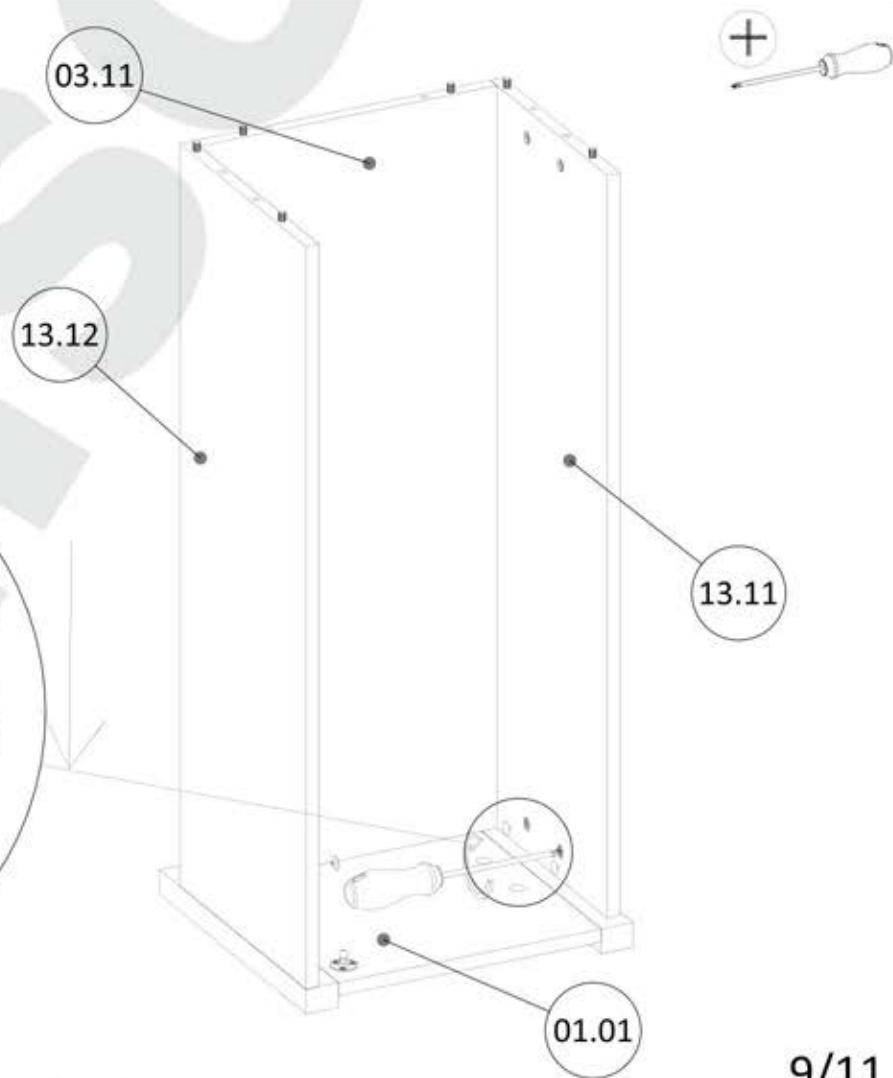
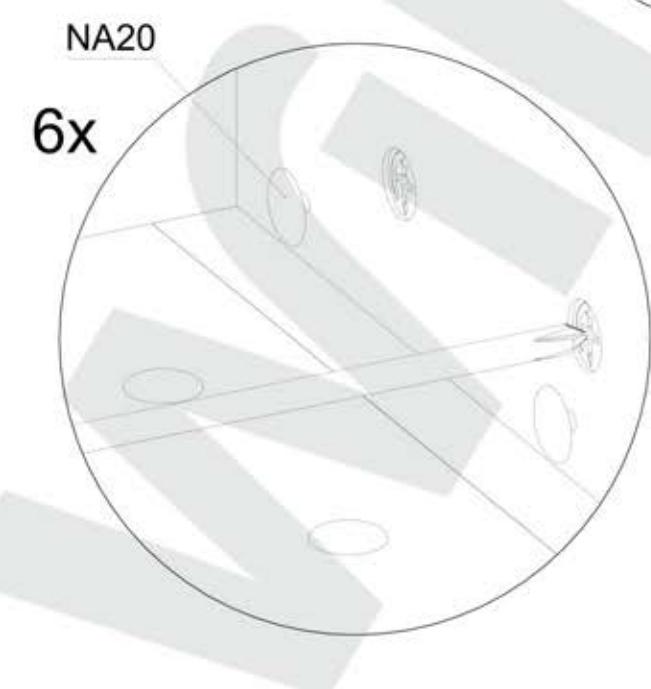
LN-10




13.11

03.11



8/11

**11**NA20  
2x**12**NA20  
6x

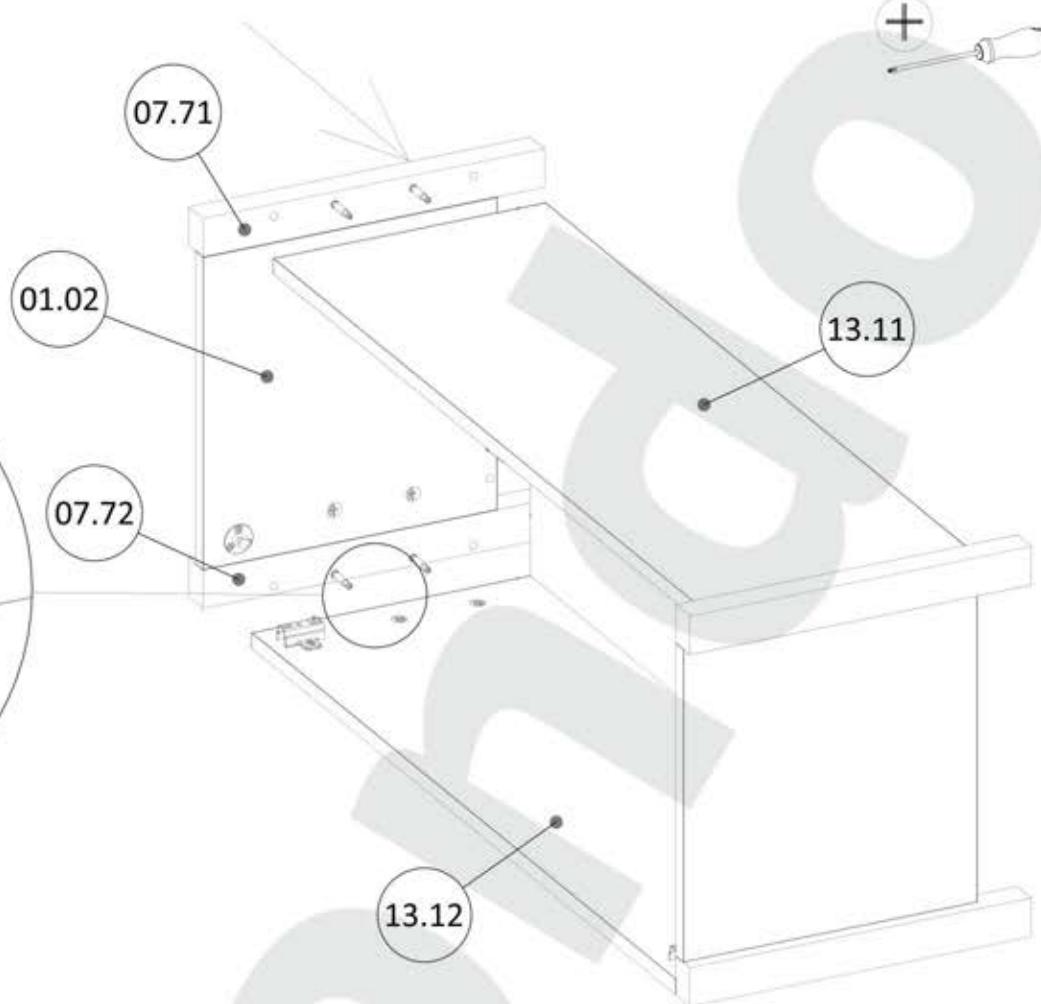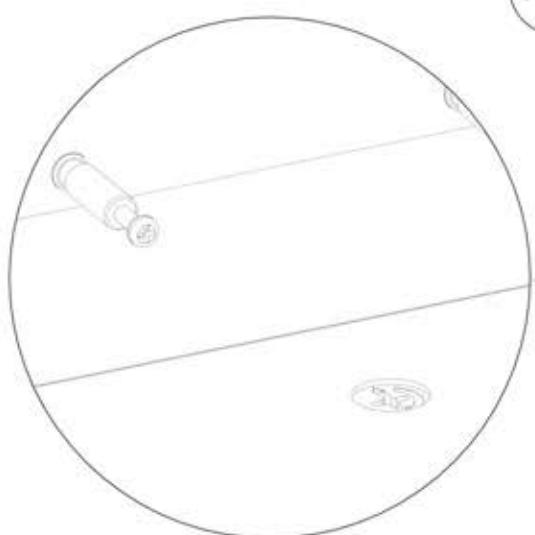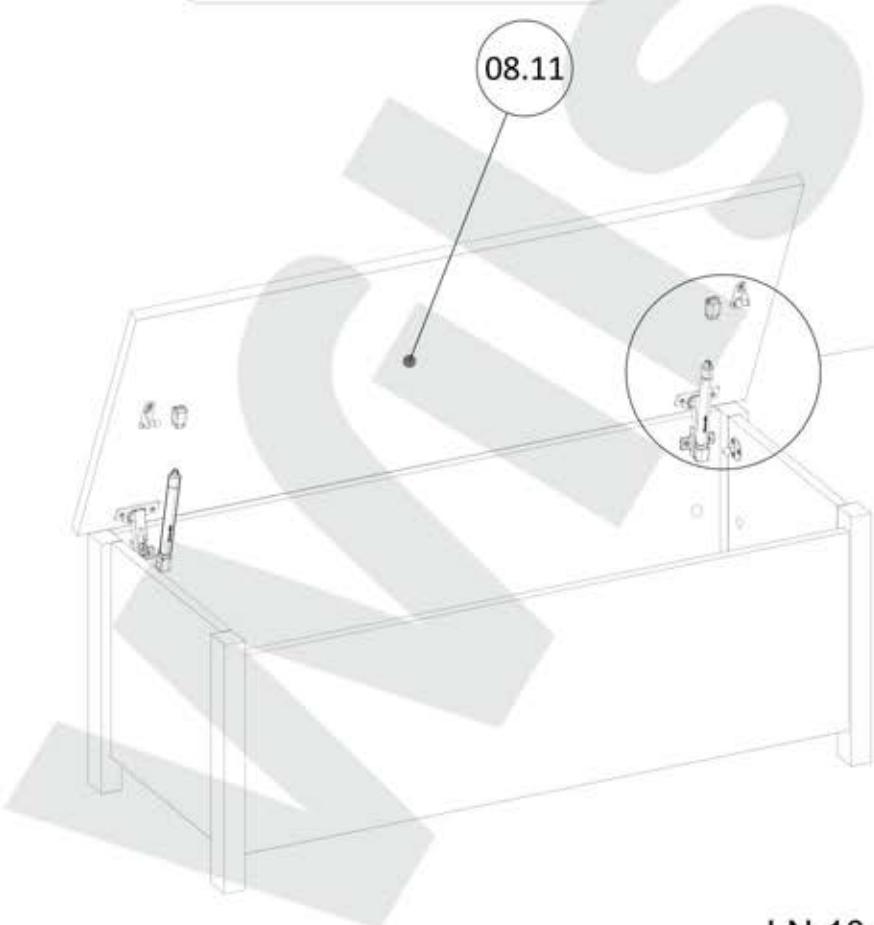**13**NA20  
6x**14**PO60  
60N  
2x

PO60

